# Installation Instruction



#### UNPACKING INSTRUCTIONS

- Carefully open the carton, remove contents and lay out on cardboard or other protective surface to avoid damage.
- Check package contents against the Supplied Parts List in the next page to assure that all components were received undamaged. Do not use damaged or defective parts.
- Carefully read all instructions before attempting installation.

#### IMPORTANT SAFETY INFORMATION

Install and operate this device with care. Please read this instruction before beginning the installation, and carefully follow all instructions contained herein. Use proper safety equipment during installation.

Please call a qualified installation contractor for help if you:

- If you don't understand these directions or have any doubts about the safety of the installation.
- If you are uncertain about the nature of your wall, consult a qualified installation contractor.

Do not use this product for any purpose or in any configuration not explicitly specified in this instruction. We hereby disclaims any and all liability for injury or damage arising from incorrect assembly, incorrect mounting, or incorrect use of this product.





# CAUTION!

This TV mount must be securely attached to the ceiling. If the mount is not properly installed it may fall, resulting in possible injury and/or damage.

	TOOLS REGITIED	■ 5/32"(4mm) Drill Bit	■ 3/5"(10mm) Masonry Bit	Wrench or Socket Set
		Phillips Screwdriver	■ Stud Finder	Carpenter's Level

**Note:** The mounting components and hardware supplied in this package are not designed for installations to ceilings with steel studs. If the hardware you need for your installation is not included, please consult your local hardware store for proper mounting hardware for the application.

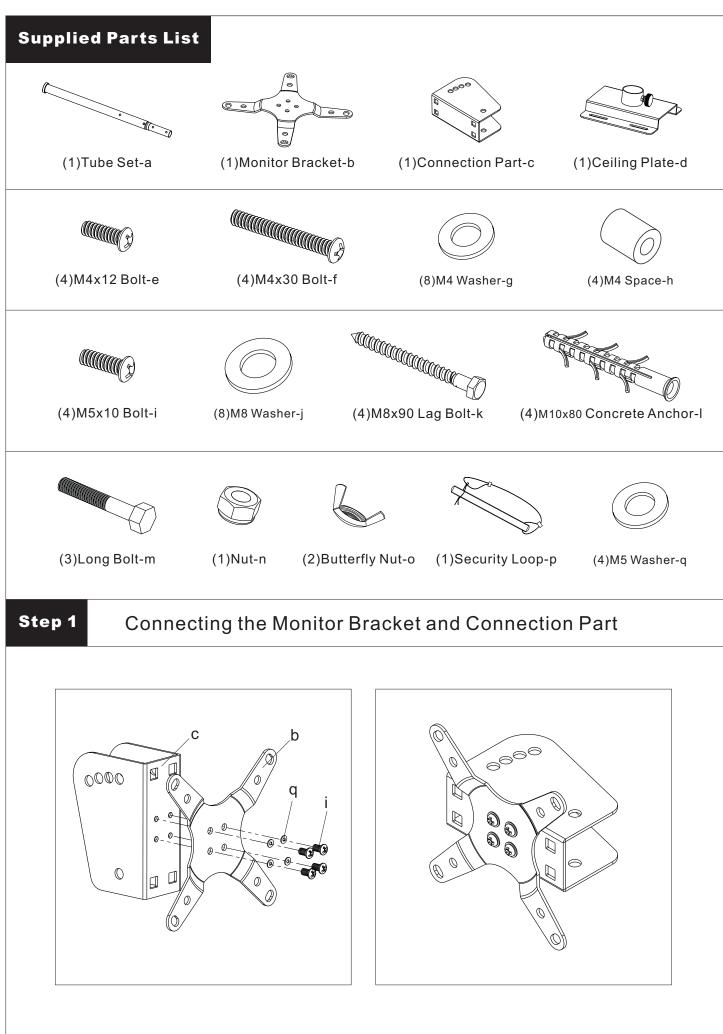

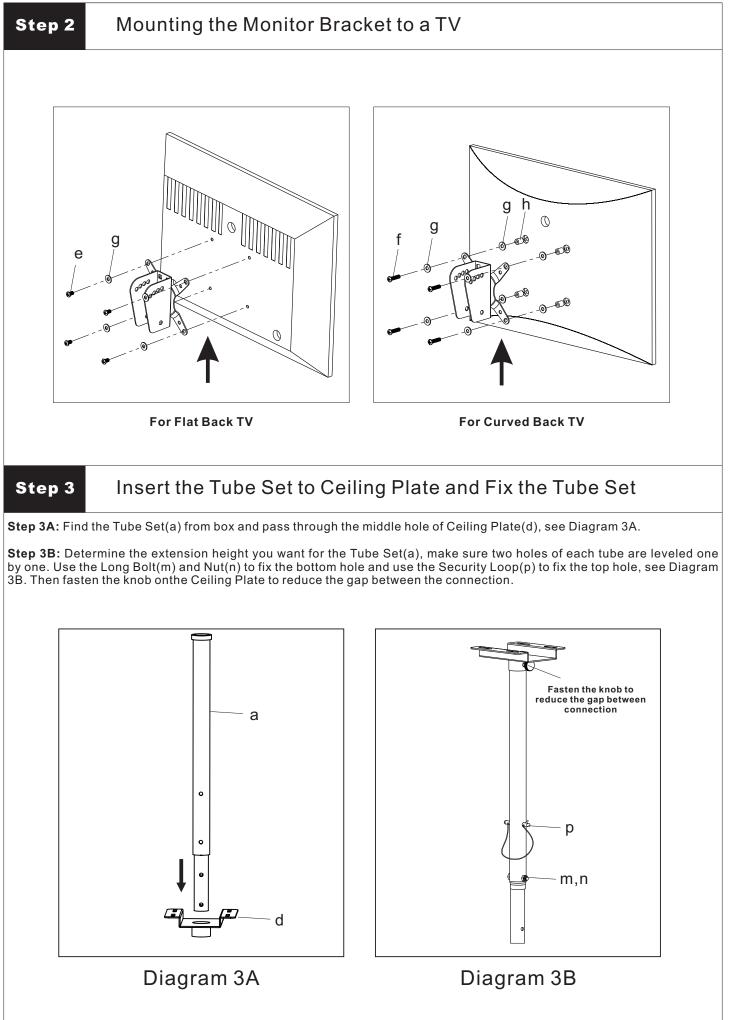

#### Step 4

### Mounting the Ceiling Plate to the Ceiling

Use the Ceiling Plate(d) as a template to mark 4 hole locations on the ceiling. Pre-Drill these holes with a 3/8"(10mm) masonry bit to at least 3"(75mm) in depth. Insert a Concrete Anchor(I) into each of these holes. Make sure the anchor is seated completely flush with the concrete surface even if there is a layer of drywall or other material in front. Attach the Wall Plate to the wall using 4pcs Lag Bolts(k) and 4pcs M8 Washer(j), see Diagram 4.

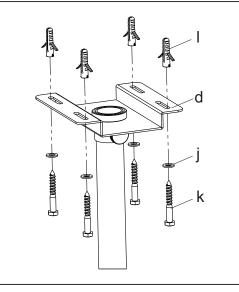


Diagram 4

#### Step 5

## Connecting the Tube to Connection Part

Determine the angle you want to tilt for the Tv and Connect the bottom of Tube Set(a) to the Connection Part(c) using 2pcs Long Bolt(m), 2pcs Butterfly Nut(o) and 4pcs M8 Washer(j), see Diagram 5.

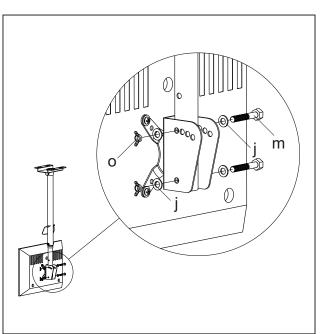


Diagram 5

## Thanks for choosing our products, enjoy the using.