
Installation Instruction

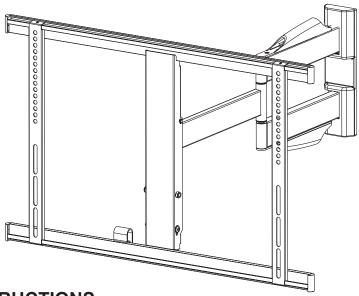

UNPACKING INSTRUCTIONS

- Carefully open the carton, remove contents and lay out on cardboard or other protective surface to avoid damage.
- Check package contents against the Supplied Parts List in the next page to assure that all components were received undamaged. Do not use damaged or defective parts.
- Carefully read all instructions before attempting installation.

IMPORTANT SAFETY INFORMATION

Install and operate this device with care. Please read this instruction before beginning the installation, and carefully follow all instructions contained herein. Use proper safety equipment during installation.

Please call a qualified installation contractor for help if you:

- If you don't understand these directions or have any doubts about the safety of the installation.
- If you are uncertain about the nature of your wall, consult a qualified installation contractor.

Do not use this product for any purpose or in any configuration not explicitly specified in this instruction. We hereby disclaim any and all liability for injury or damage arising from incorrect assembly, incorrect mounting, or incorrect use of this product.




CAUTION!


This TV mount must be securely attached to the vertical wall. If the mount is not properly installed it may fall, resulting in possible injury and/or damage.

Tools Required	■ 4mm Drill Bit	■ 8mm Masonry Bit	■ Carpenter's Level
	■ Phillips Screwdriver	■ Stud Finder	-


Note: The mounting components and hardware supplied in this package are not designed for installations to walls with steel studs or to cinder block walls. If the hardware you need for your installation is not included, please consult your local hardware store for proper mounting hardware for the application.

 Supplied Parts List

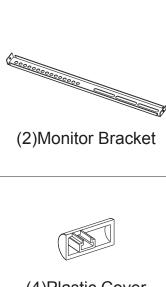



 (1)Wall Plate



(1)Wall Plate Cover

(4)Plastic Cover



(1)Wire Route 1



(2)Wire Route 2



(1)Allen Key



(4)M4 Spacer-A



(8)5mm M6/M8 Spacer-B



(4)20mm M6/M8 Spacer-C



(4)M4 Washer-D



(4)M6 Washer-E



(4)M8 Washer-F



(4)M4x12 Bolt-G



(4)M4x30 Bolt-H



(4)M6x20 Bolt-J



(4)M6x35 Bolt-K



(4)M8x20 Bolt-L



(4)M8x35 Bolt-M



(4)M8x45 Bolt-N



(4)Lag Bolt Washer-X



(4)M6x70mm Lag Bolt-Y




(4)M8x60mm Concrete Anchor-Z


Step 1

Mounting the Monitor Brackets to a TV


1.1 G/H/J/K/L/M/N

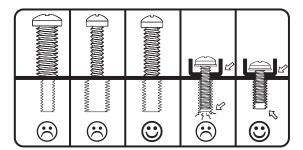


1.2 A/B/C (Optional)

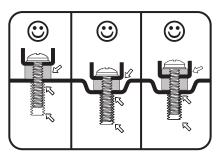

1.3

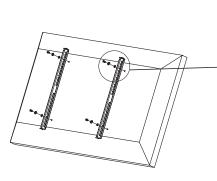


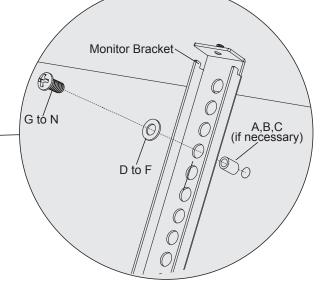


Step 2

Install the Cross Rails to Monitor Brackets


2.1 Insert the Cross Rails to Monitor Brackets as showed below.

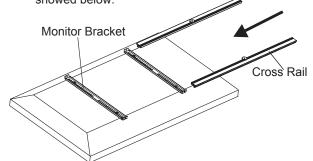


2.2 Fasten four screws as showed below to fix the Cross Rails on the Monitor Brackets.

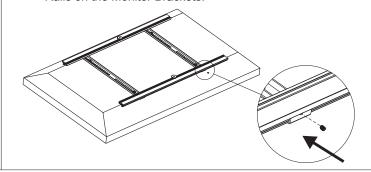

2.3 Install four pieces Plastic Covers into each end of Cross Rails.

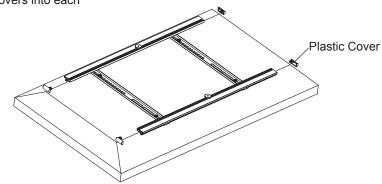


3.1 3.2 Wall Plate Tomm 60mm

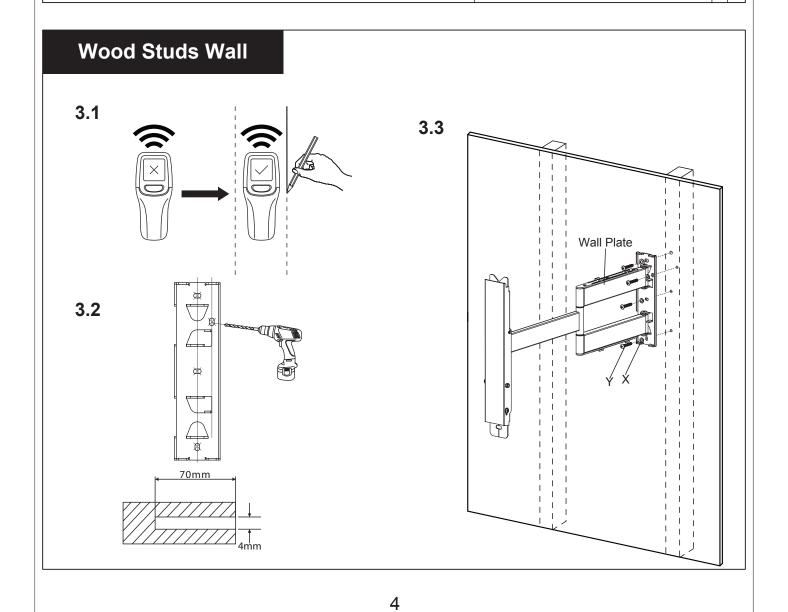


Step 4

Attach TV to the Wall Plate


4.1 Remove the lower round nut from the Cross Rail as showed below.

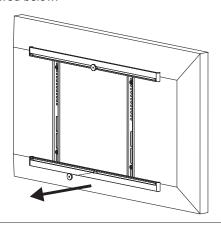

4.2 Attach upper round nut to the slot of tilting head.

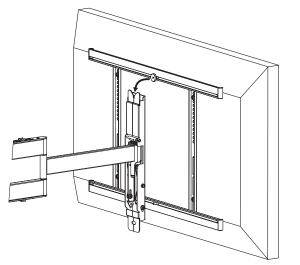


4.3 Adjust the level of TV, then fasten the lower round nut as showed below.

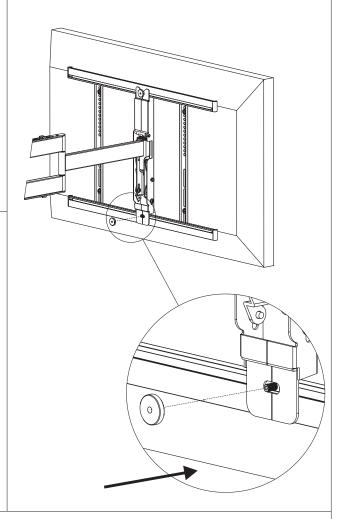


Step 5

Install the Wall Plate Cover on the Wall Plate

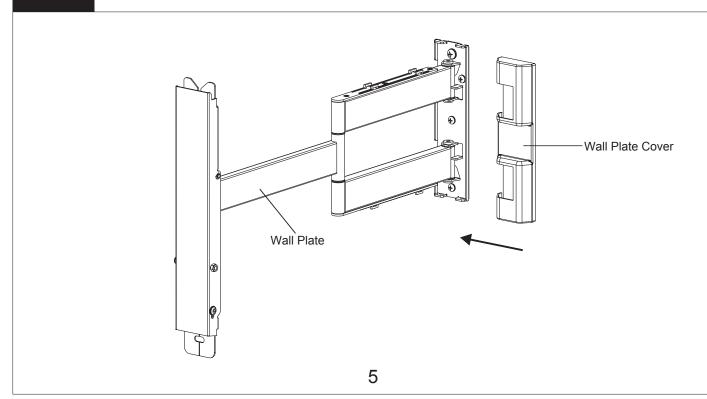


Step 6

Install the Wire Routes and manage the wires

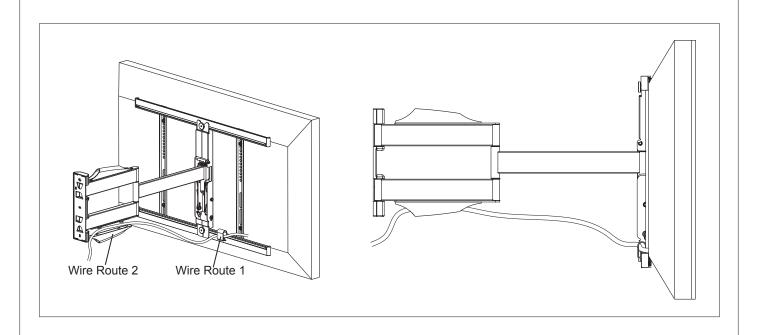

Step 7

Adjust the tilting angle by pull the TV down

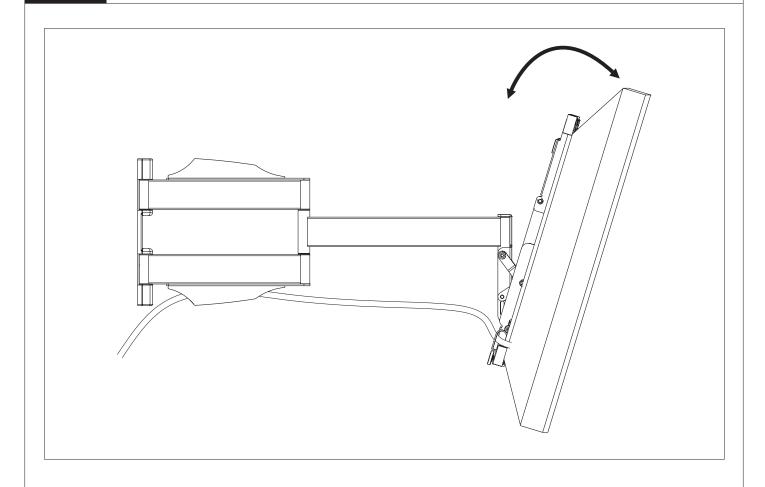

Thank you for choosing our products.