 


Installation Instruction

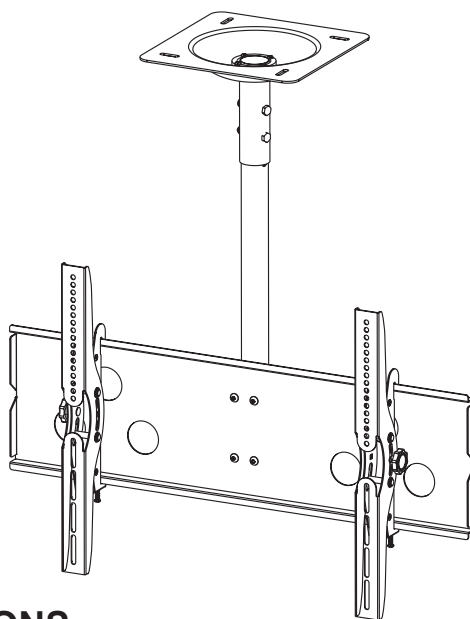

UNPACKING INSTRUCTIONS

- Carefully open the carton, remove contents and lay out on cardboard or other protective surface to avoid damage.
- Check package contents against the Supplied Parts List in the next page to assure that all components were received undamaged. Do not use damaged or defective parts.
- Carefully read all instructions before attempting installation.

IMPORTANT SAFETY INFORMATION

Install and operate this device with care. Please read this instruction before beginning the installation, and carefully follow all instructions contained herein. Use proper safety equipment during installation.

Please call a qualified installation contractor for help if you:

- If you don't understand these directions or have any doubts about the safety of the installation.
- If you are uncertain about the nature of your wall, consult a qualified installation contractor.

Do not use this product for any purpose or in any configuration not explicitly specified in this instruction. We hereby disclaim any and all liability for injury or damage arising from incorrect assembly, incorrect mounting, or incorrect use of this product.



WARNING


CAUTION!

This TV mount must be securely attached to the ceiling. If the mount is not properly installed it may fall, resulting in possible injury and/or damage.


Tools Required	<ul style="list-style-type: none"> ■ 5/32"(4mm) Drill Bit ■ Phillips Screwdriver 	<ul style="list-style-type: none"> ■ 3/5"(10mm) Masonry Bit ■ Stud Finder 	<ul style="list-style-type: none"> ■ Wrench or Socket Set ■ Carpenter's Level
----------------	--	---	---

Note: The mounting components and hardware supplied in this package are not designed for installations to ceilings with steel studs. If the hardware you need for your installation is not included, please consult your local hardware store for proper mounting hardware for the application.

 
Supplied Parts List 1

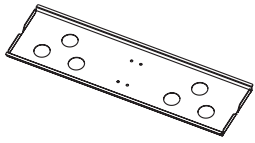

 
(1)TV Plate

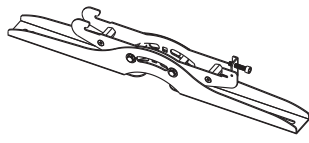

 
(1)Left Monitor Bracket

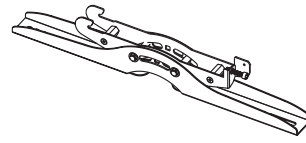

 (1)Right Monitor Bracket



 
(1)Allen Key




(4)M4 Spacer-A



 
(8)5mm M6/M8
Spacer-B

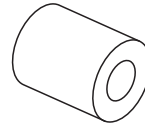

 
(4)20mm M6/M8
Spacer-C



 (4)M4 Washer-D



 (4)M6 Washer-E




(4)M8 Washer-F



(4)M4x12 Bolt-G



 
(4)M4x30 Bolt-H




(4)M6x20 Bolt-J



 
(4)M6x35 Bolt-K



 
(4)M8x20 Bolt-L



 
(4)M8x35 Bolt-M



 
(4)M8x45 Bolt-N



 
(4)Lag Bolt Washer-X



 
(4)M8x90mm Lag Bolt-Y



 (4)M10x80mm
Concrete Anchor-Z

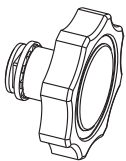


 (2)Plastic Knob

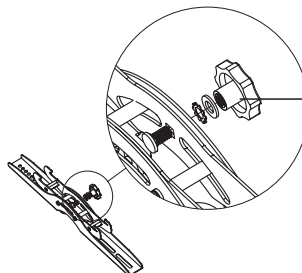


Pls install the Plastic Knob on the Monitor Bracket as left diagram before proceeding to the next step. Pls note the two knobs should be installed in the opposite way on the two monitor brackets.

 
Supplied Parts List 2

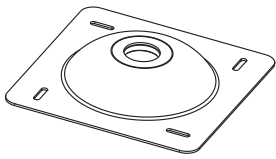

 
(1)Ceiling Plate



 
(1)Outer Tube

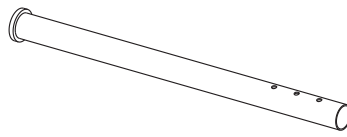

 
(1)Inner Tube

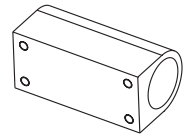

 (1)Connection Part



 
(4)M8x10 Bolt



(2)M8x60 Bolt



 
(2)M8 Nut

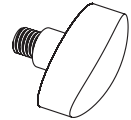

(1)Knob



 (4)M5x12 Bolt




(2)Decoration Plate



(6)M6x16 Bolt


Step 1

 Assemble the Ceiling Plate with Outer Tube

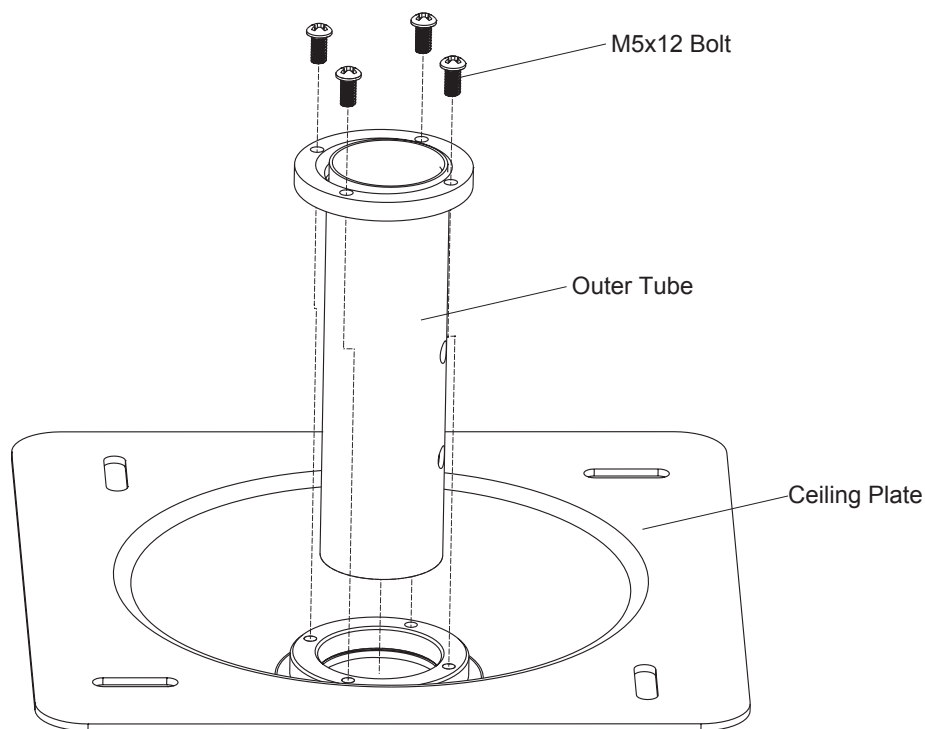


Step 2

 Mounting the Ceiling Plate to the Ceiling

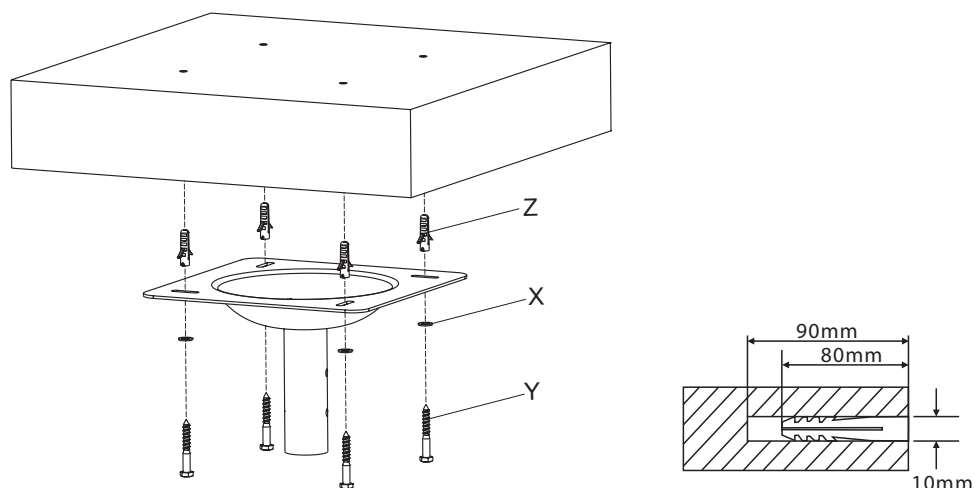


Step 3

 Connect the Connection Part to Inner Tube

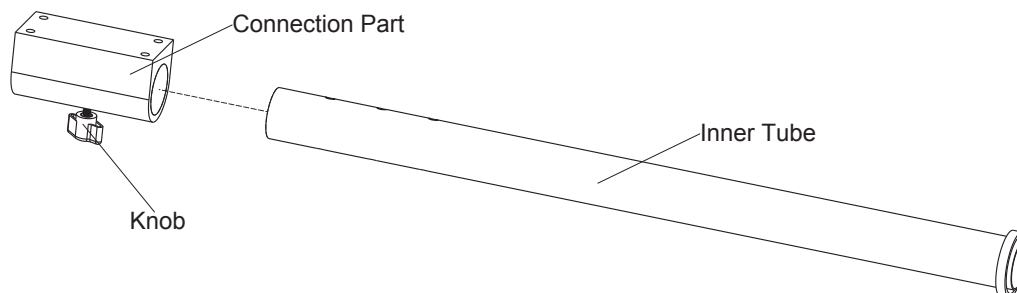


Step 4

 Connect the Outer Tube and Inner Tube

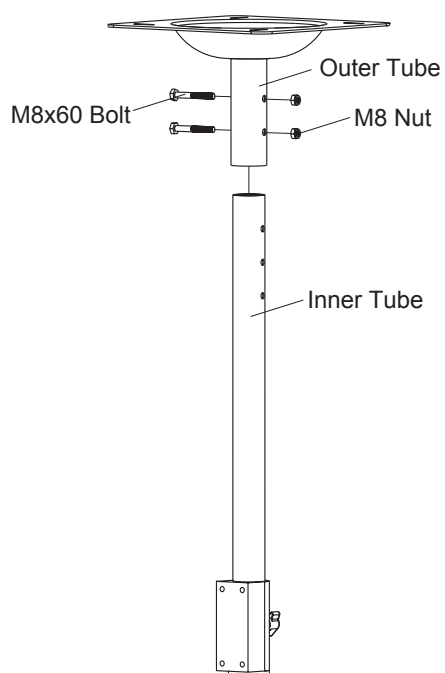

Step 5

 
Install the TV Plate to Connection Part

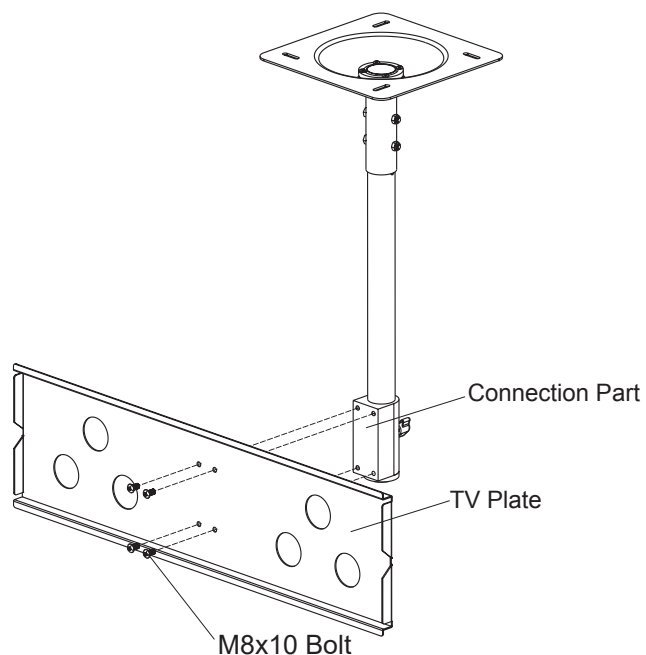


Step 6

Mounting the Monitor Bracket to a TV

 
6.1 G/H/J/K/L/M/N

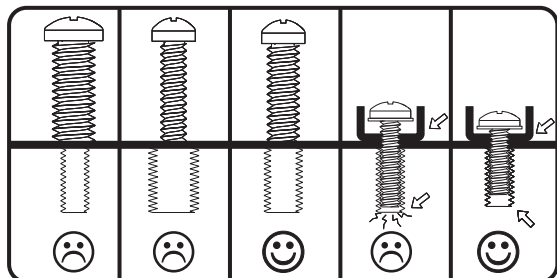

 6.2 A/B/C (Optional)

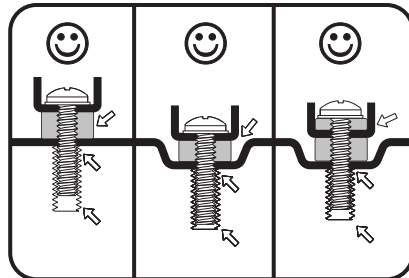

 
6.3

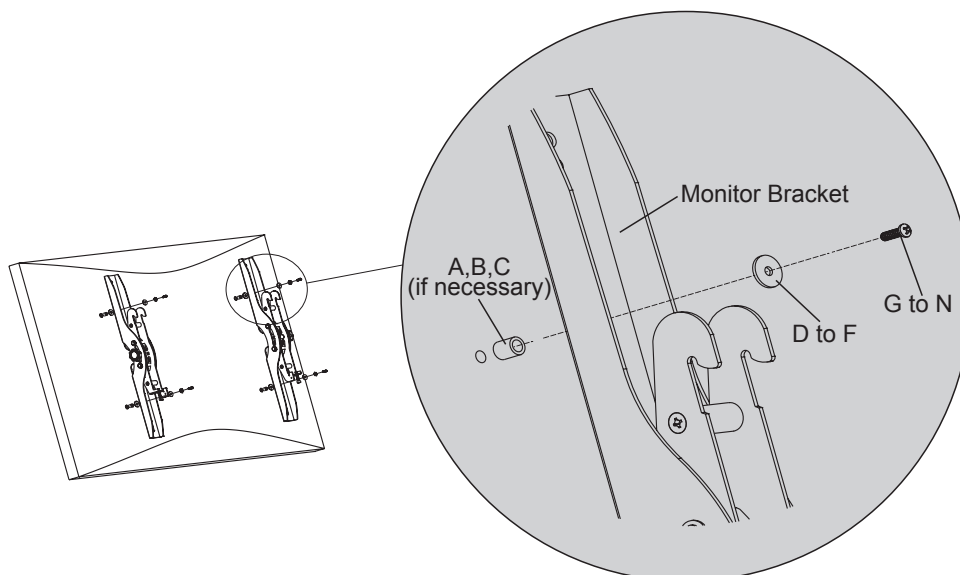


Step 7

Attaching Monitor to TV Plate and Adding the Safety Bolts

 7.1

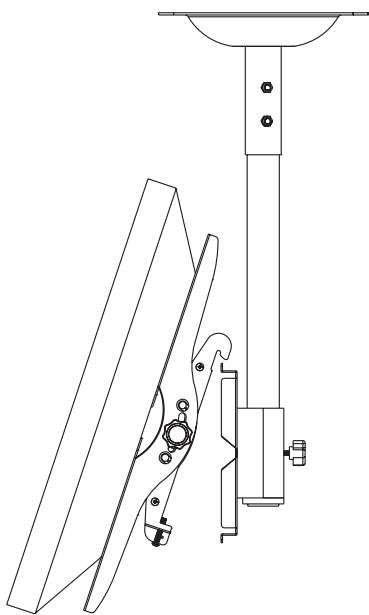

 7.2

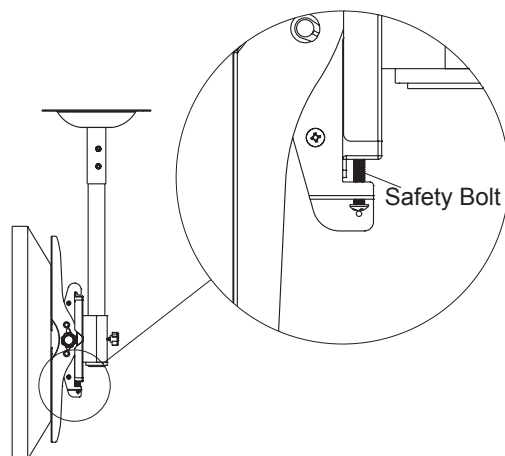

Step 8

Install Decoration Plate on Plasterboard Ceiling

