 


SUREMOUNT®

MOBILE MANUAL ARTICULATING TV STAND INSTALLATION MANUAL

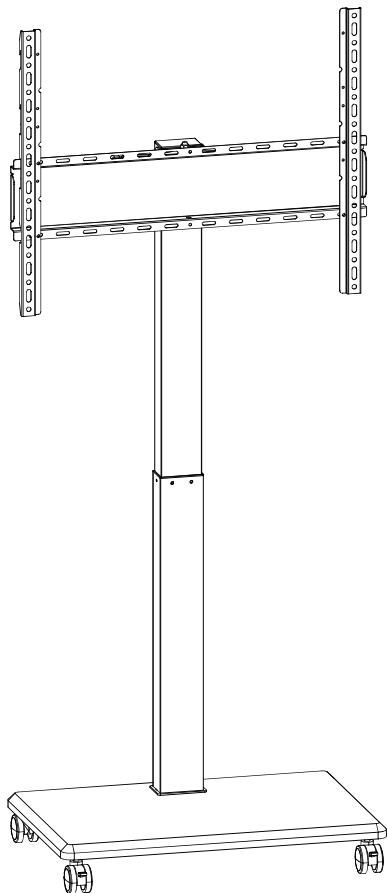

Model No. SMMARTS

**TV Weight Limit:
DO NOT EXCEED**



THANK YOU FOR YOUR PURCHASE

SERVICE CARD

We strive to make sure each item is perfect and that all parts and hardware in the parts list are included in your package. However, if there are any missing or damaged parts, please contact us. We will do our best to resolve your problem

CUSTOMER SERVICE SUPPORT

Email: sales@suremount.co.nz

NOTICE



Please read this assembly manual carefully and make sure you have all the parts in the list before you begin to install.
Please keep this manual for future reference.



Please move the furniture gently with **2 people**.



Please protect the furniture by placing all parts on a soft surface during assembly.



Please don't place very warm/cold objects on top of any surface, clean immediately with microfiber cleaning cloths/towels if any liquids are left on the surface.
Never use multi-surface furniture polish spray or cleaner.
Do not touch the surface with a hard/sharp object that may cause scratching.











Adult supervision required.

Do not allow children to climb on the stand.
Improper use or incorrect assembly may cause death or serious injury.
Use extra safety straps to ensure the best tip-over protection.







Do not use this product for any purpose or in any configuration not explicitly specified in this instruction.

We hereby disclaim any liability for injury or damage arising from incorrect assembly, incorrect mounting, or incorrect use of this product.


PARTS LIST

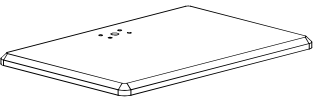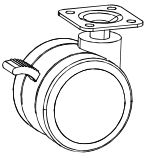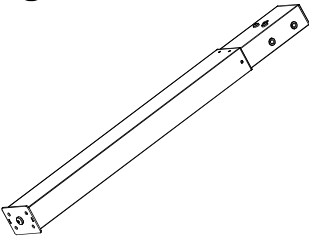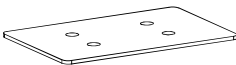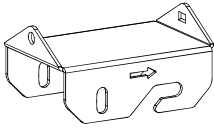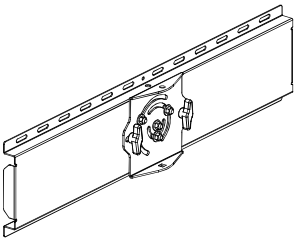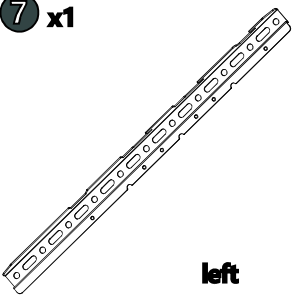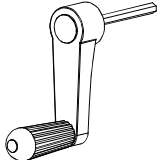1 x1 	2 x4 	3 x1 
4 x1 	5 x1 	6 x1 
7 x1  left	8 x1  right	9 x1 

 PARTS LIST

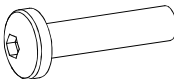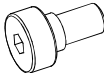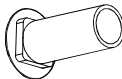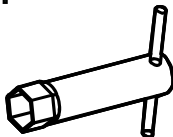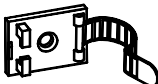A x4 	B₁ x2 	B₂ x2 	
B₃ x2  Iron	C x4 	D x16 	E₁ x2 
E₂ x2  Plastic	F₁ x2 	F₂ x2  Plastic (with adhesive backing)	
G x4  Crank placement buckle	L₁ x1  (5mm)	L₂ x1  M8	
L₃ x2 	S  Screws for TV	 Tools Required (Not included)	


1



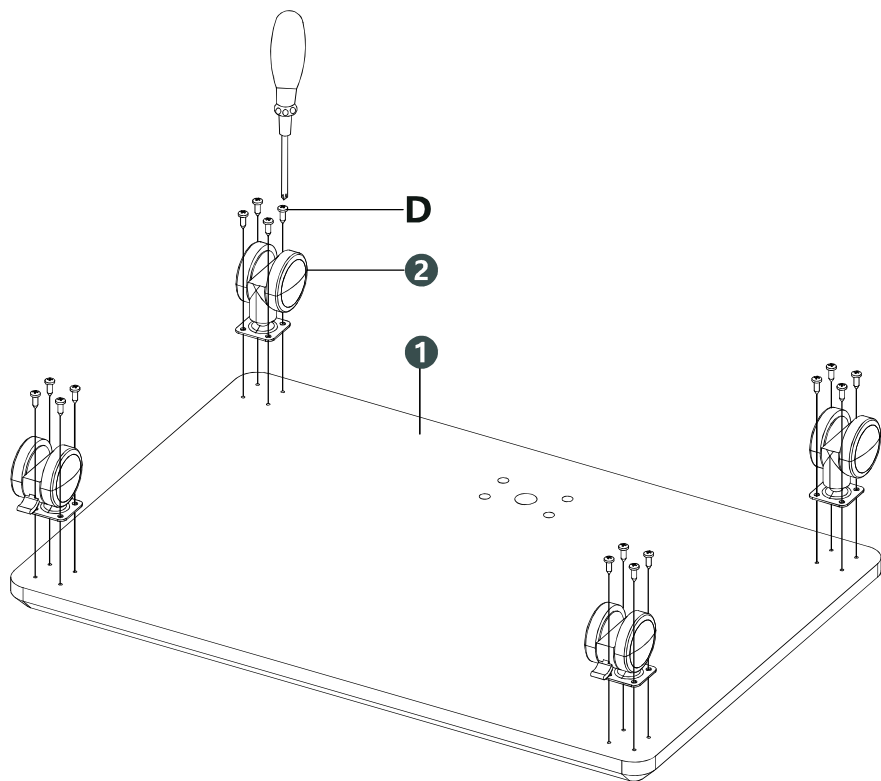


2




Install the upper pipe clamp screw with its head facing backward.

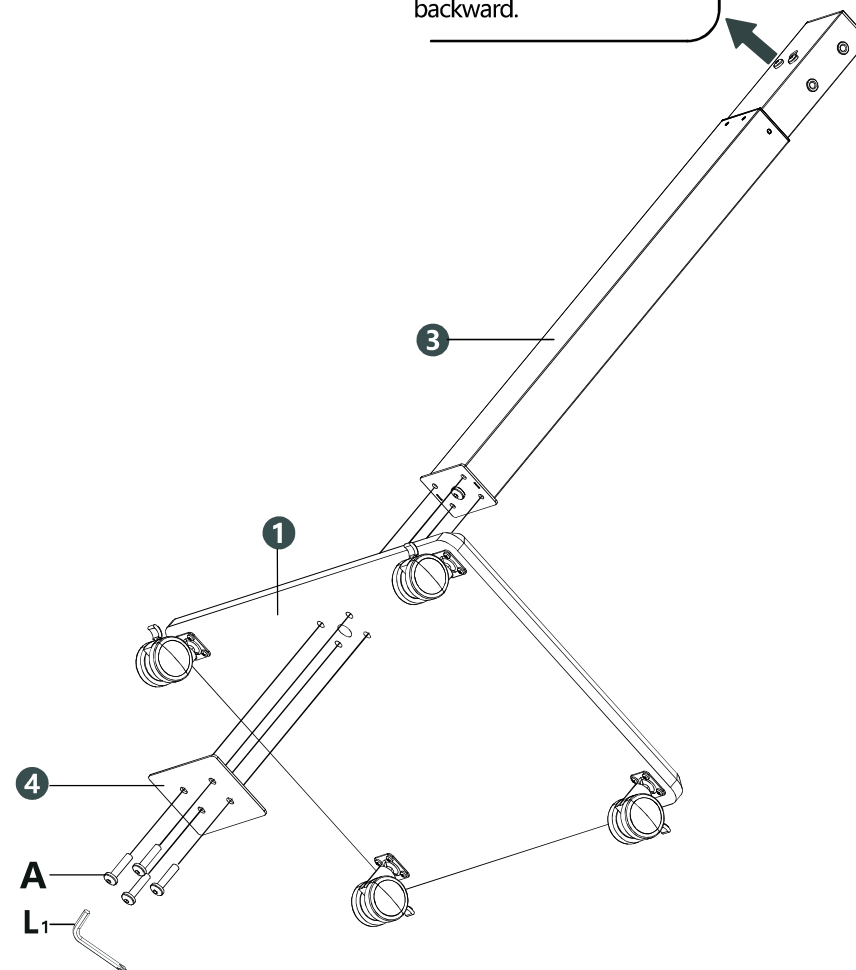

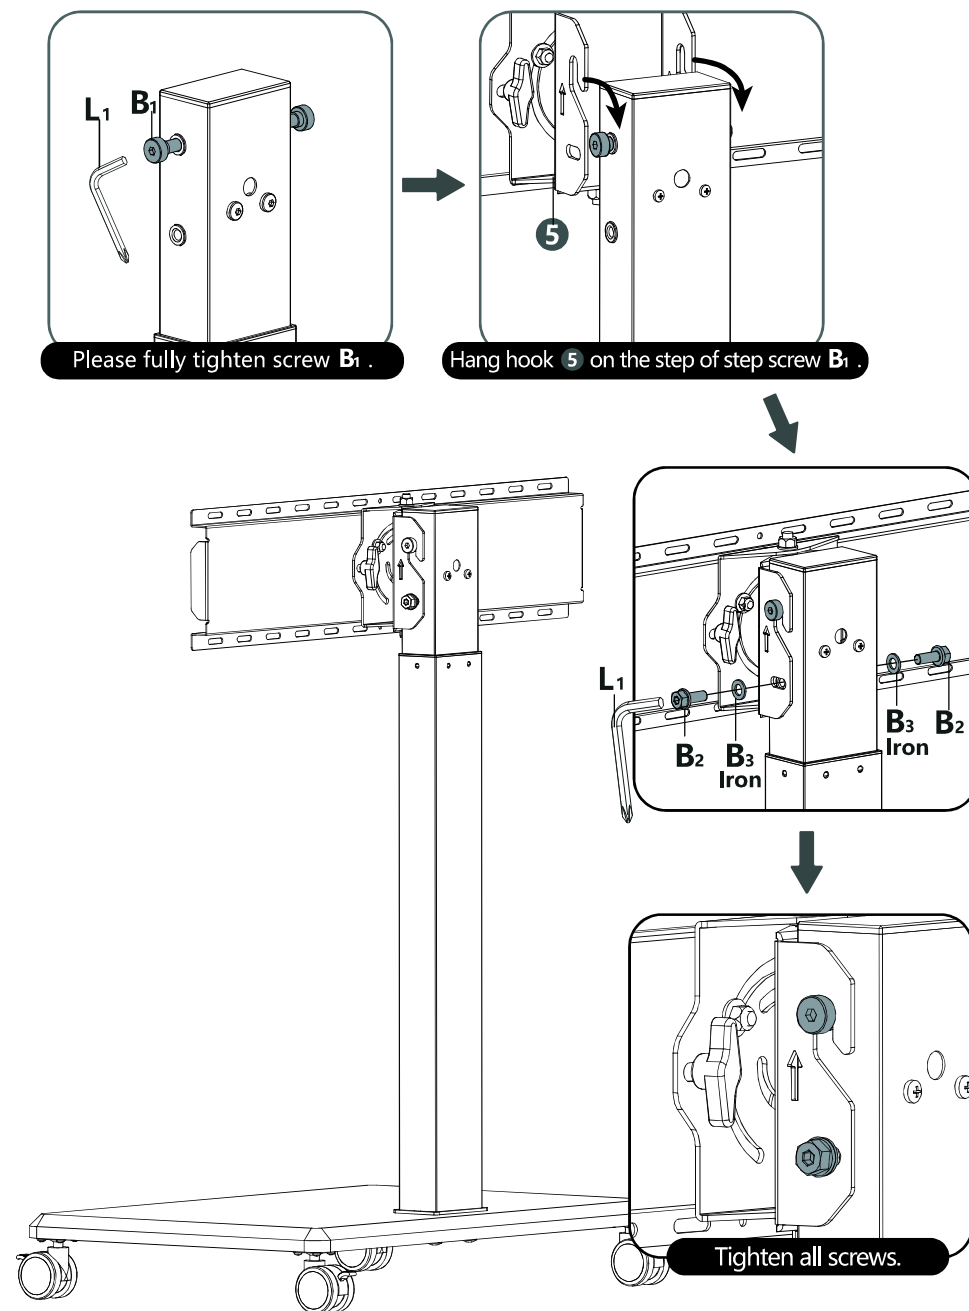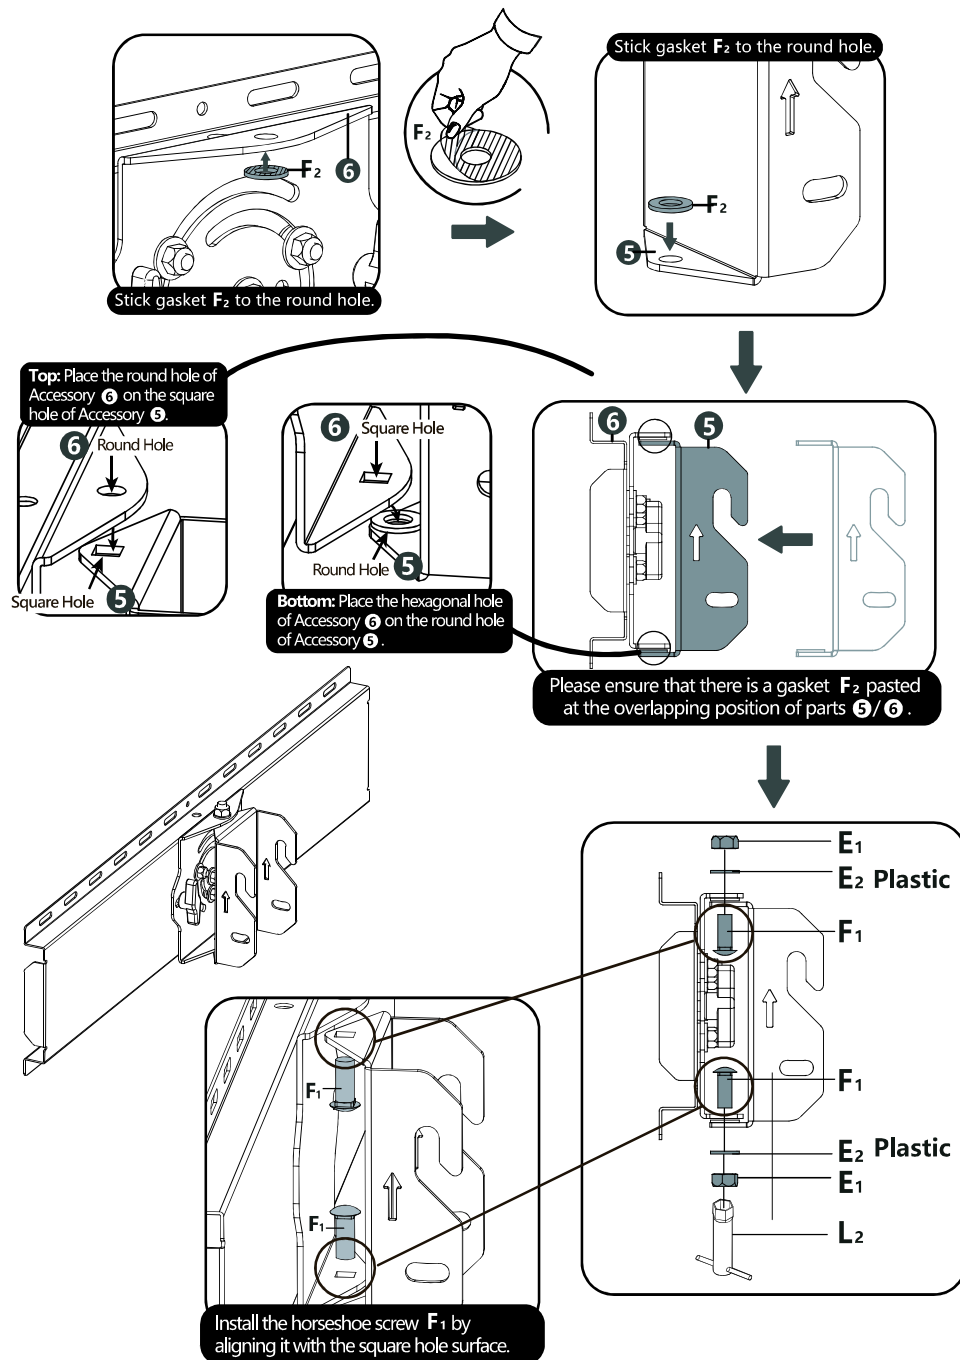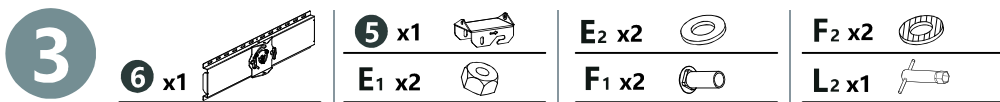





5

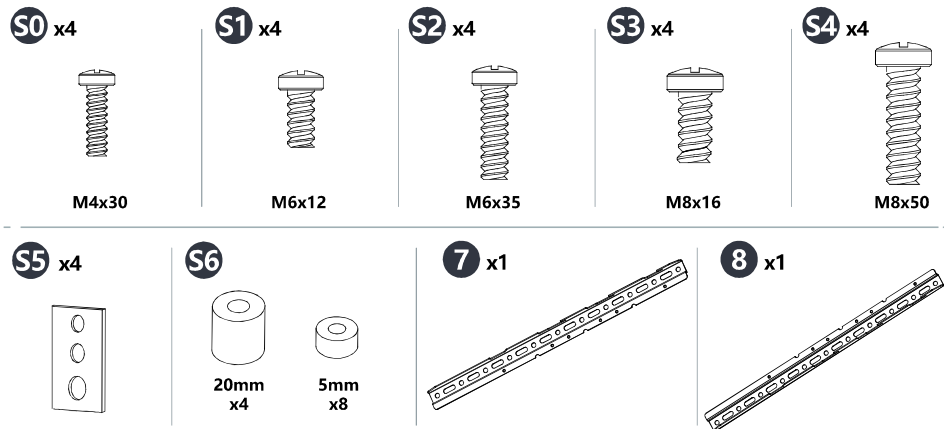

STEP 1

Select TV Screw Diameter

Please make sure the diameter of the screw **S0-S4** are suitable for your TV.

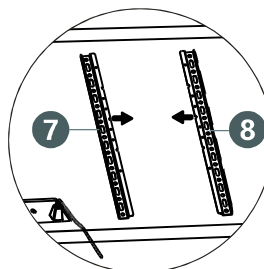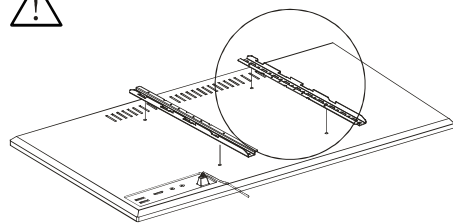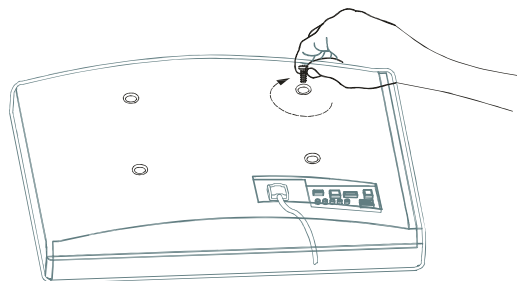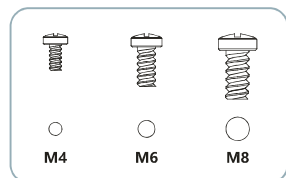

Install with the folded edge facing inward.

STEP 2

Measure VESA For Your TV

1. What does the VESA standard mean?

The VESA standard is a standard for attaching flat screens / LCD / monitors / televisions to monitor mounts or TV mounts.


Prerequisite is that both the monitor / TV and the monitor mount have the same VESA standard.

2. Look at the back of your TV/monitor for threaded holes.

Measure the horizontal distance **W** and vertical distance **H** of the screw holes (center to center).

W x **H** should comply with the VESA standard of TV stand listed in below sheet.

Notice: If the TV/monitor is not compatible with VESA, it can still be attached to the desired bracket by using VESA Adapters(not included and should be purchased separately).

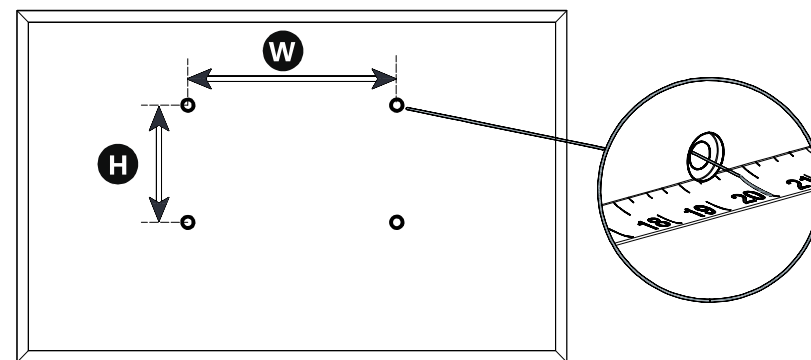

TV

Units: mm

W	x	H	
100	x	100	✓
200	x	100	✓
200	x	200	✓
300	x	200	✓
300	x	300	✓
400	x	300	✓
400	x	200	✓
400	x	400	✓
600	x	200	✓
600	x	400	✓
600	x	500	✓


VESA standard of TV STAND

STEP 3

Holes Selection of Brackets


When **H** is shorter than 500mm, different TV heights can be set based on bracket hole positions, as shown in the following figure.

Choose the lower holes to lower the TV height

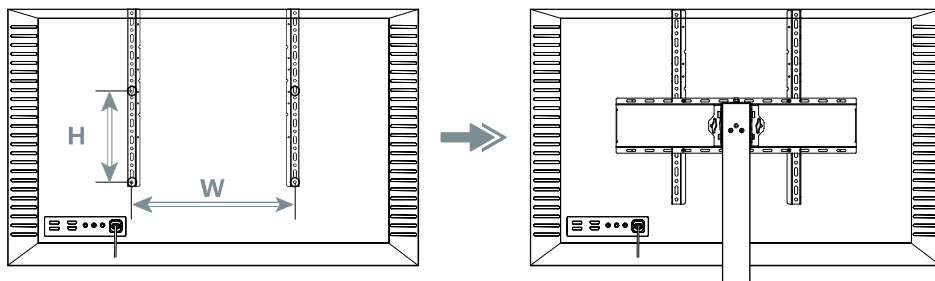

Back of TV

Choose the upper holes to raise the TV height


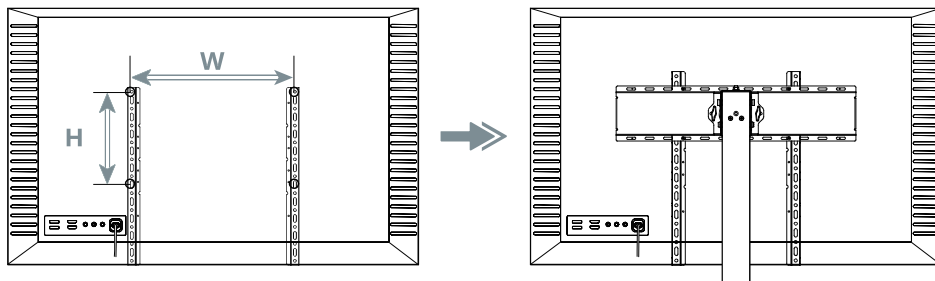


Back of TV

STEP 4

Hook installation precautions


When installing, align any one of the three arc-shaped notches at the folded edge of hook **7** / **8** with the center line of the TV as close as possible according to the height of the notch, and then fix it.

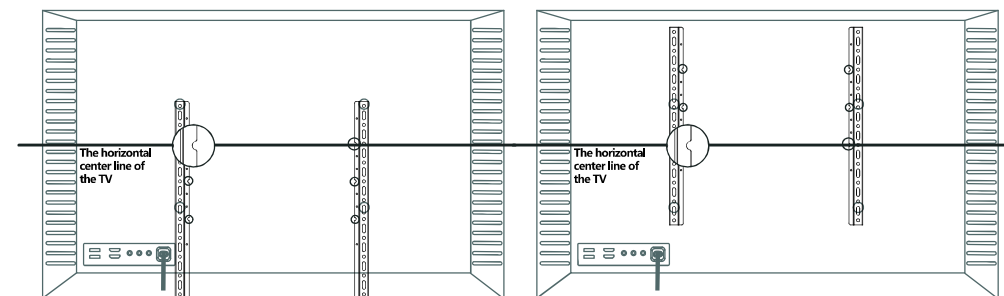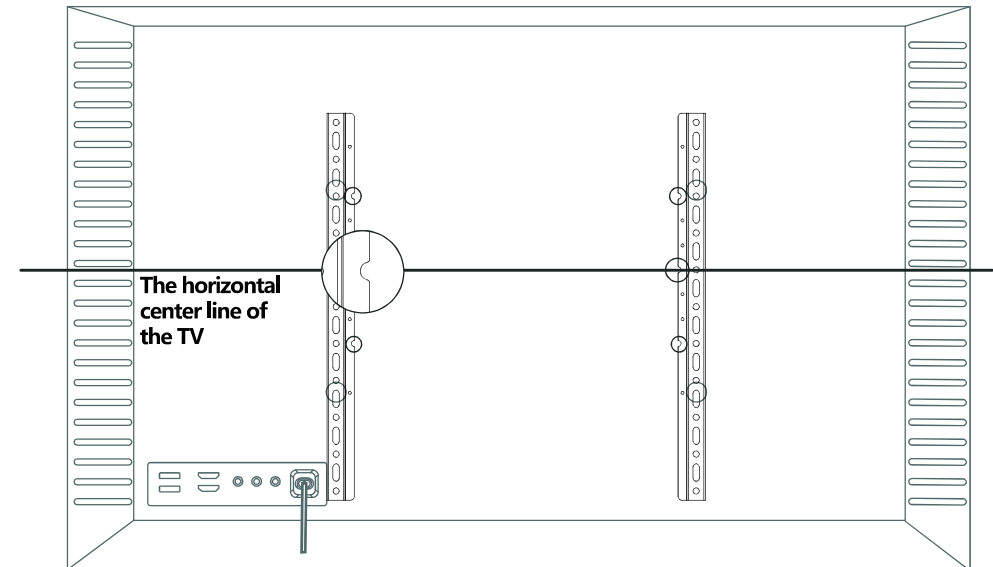


STEP 5

Select TV Screw Length


When attaching brackets to the TV, be careful not to over tighten screws and be sure that screws don't bottom out in the mounting holes. Please make sure the length of thread engagement at least 6 turns or 8mm.

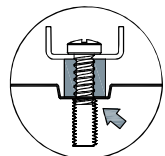


⊗ Too Short

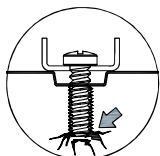

⊗ Too long

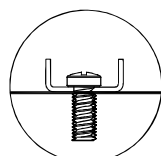

✓ Correct

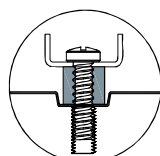


✓ Correct


STEP 6

Select installation method according to TV


⚠ Please confirm the style of the TV backplane before installation and select the corresponding installation method

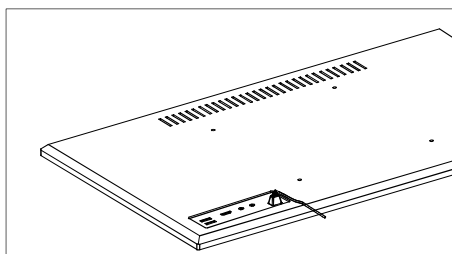


For flat back TV,
please choose "Option 1"

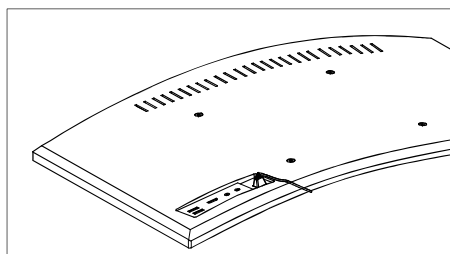

For round back TV or Curved TV,
please choose "Option 2"

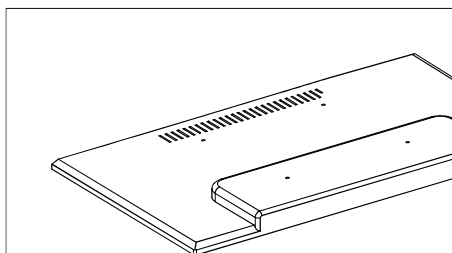


For TV's with a "Bump",
please choose "Option 3"

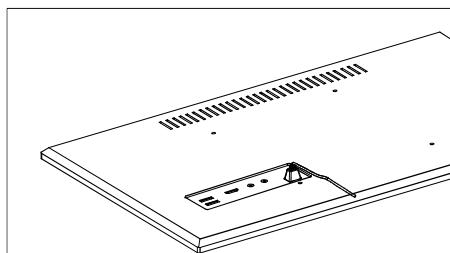



For potential cable blockage,
please choose "Option 4"

Option 1 (For Flat Back TV's)


Option 2

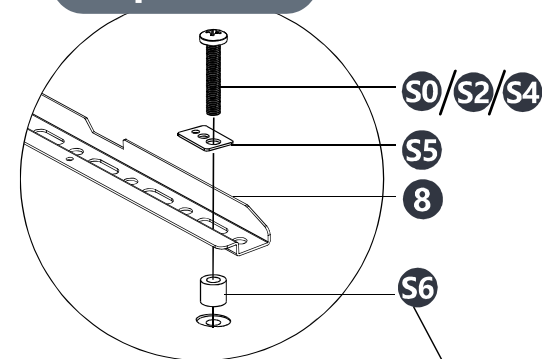


Option 1

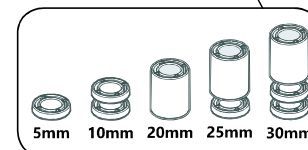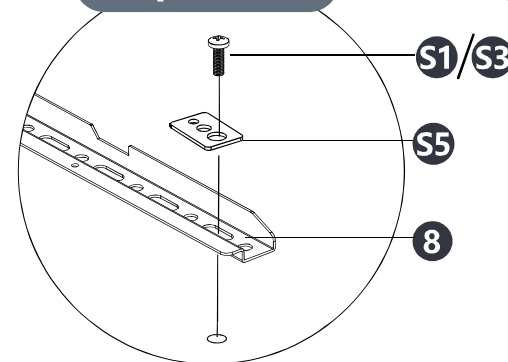

Different height options
combined with S6

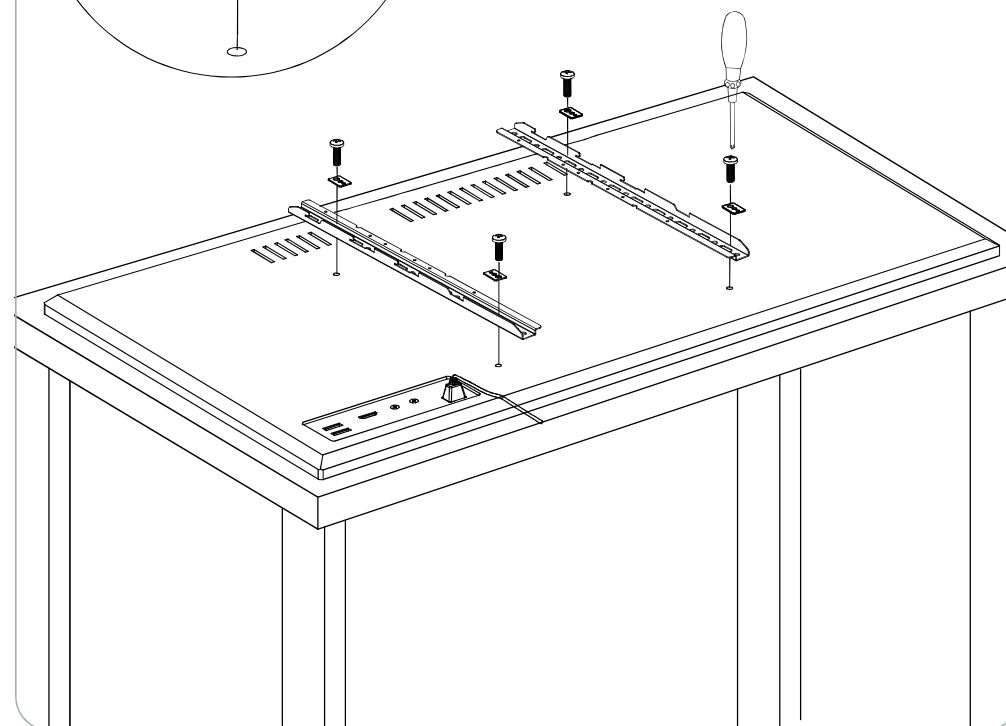


Option 2 (For Round Back TV's or Curved TV's)

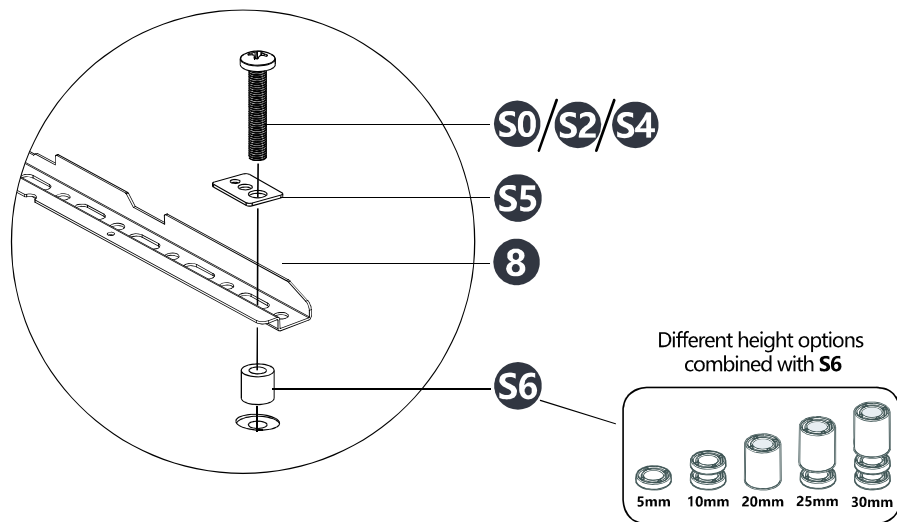



Option 3 (For TV's with a "Bump")

Spacers may be necessary for 2 holes ONLY.

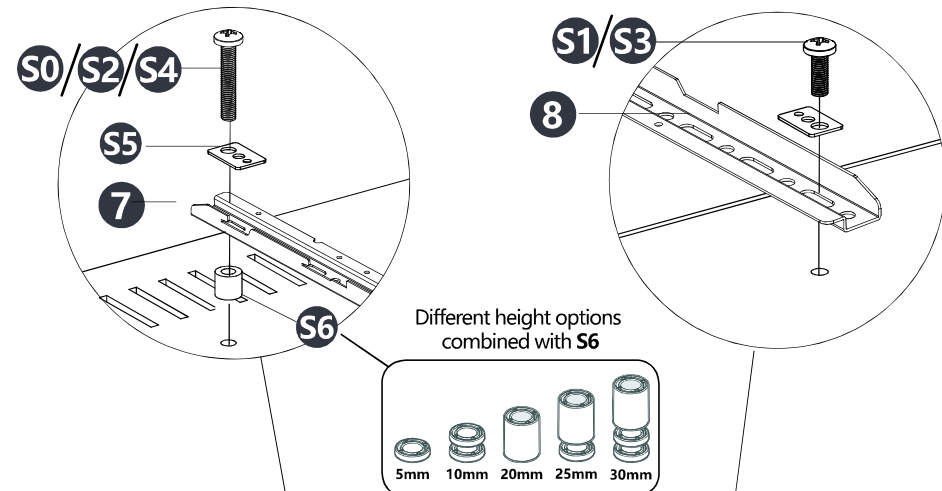

Option 4 (Potential Cable Blockage)


Spacers may be necessary when cables or plug/outlets are blocked by brackets.

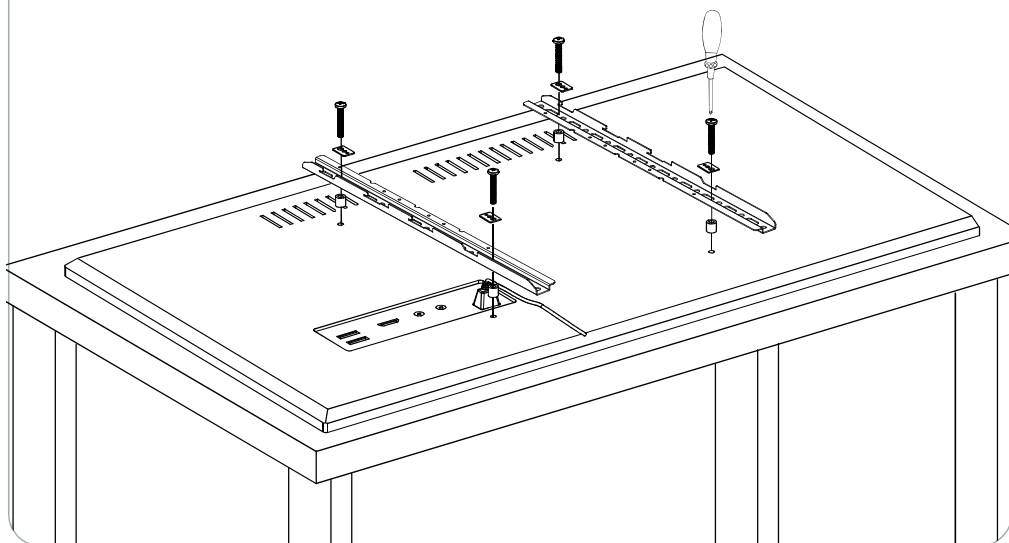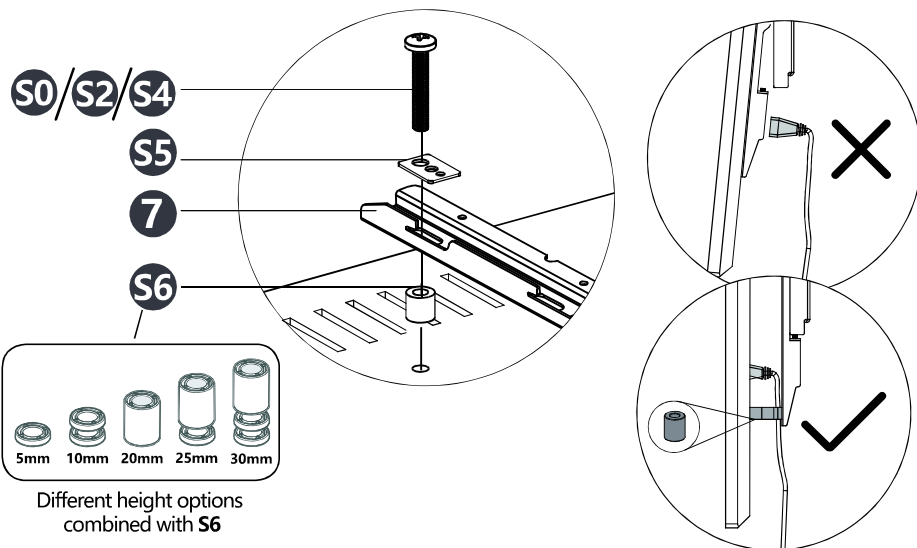

6

When installing, align one of the arc-shaped notches of hook 7/8 with the TV's center line, position it centrally, and then install it onto the hanging plate.


Note -- For specific hook installation instructions, please refer to P11

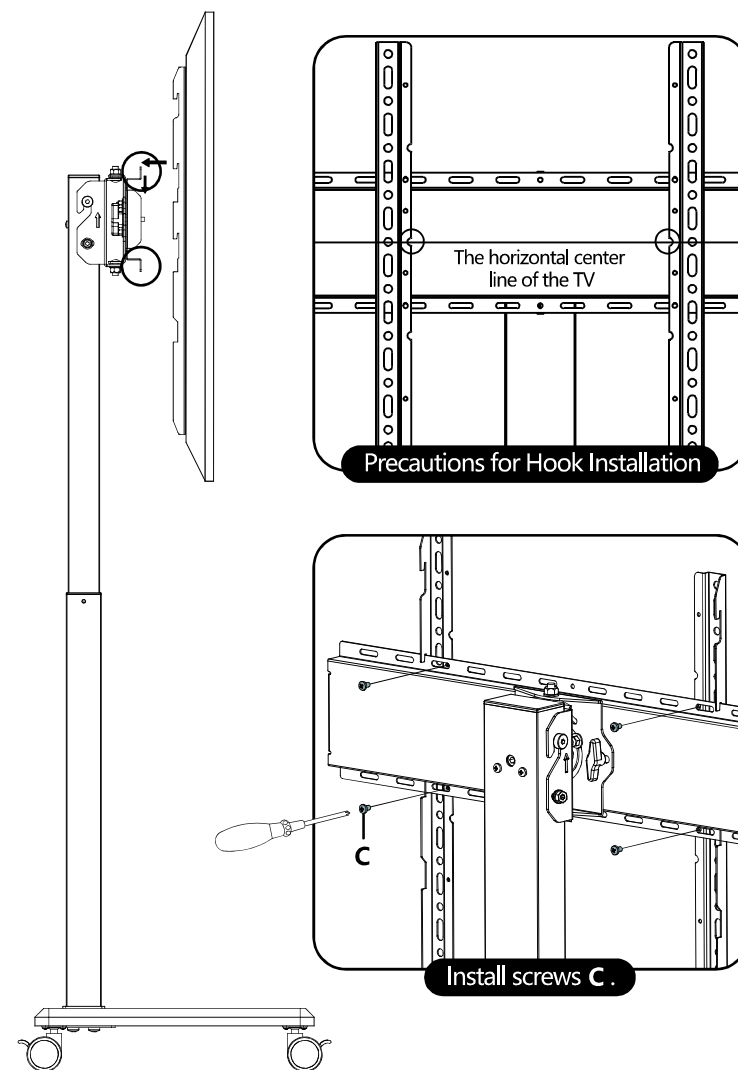

7

L₃ x2 

Cable management clips L₃ lets you easily organize power and AV cords to keep things neat.

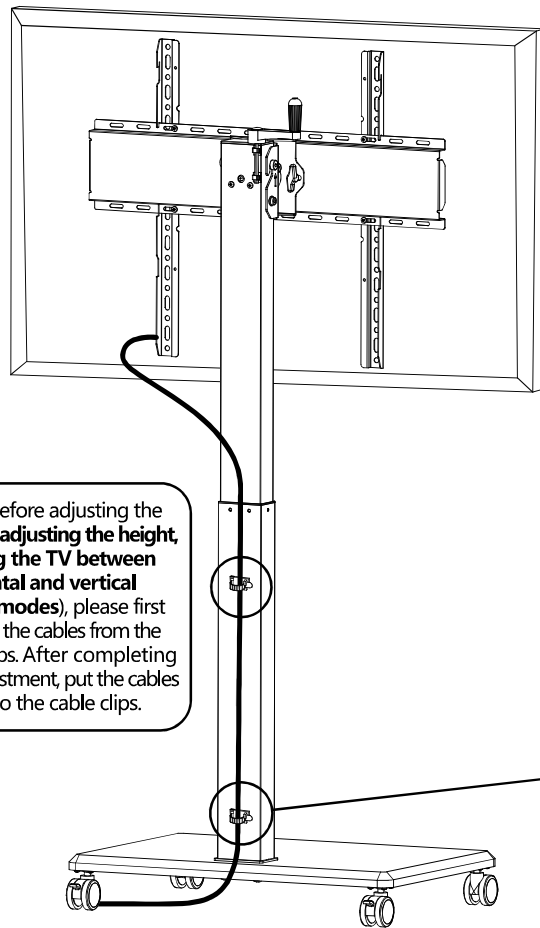


! Note: Before adjusting the TV (e.g., adjusting the height, rotating the TV between horizontal and vertical screen modes), please first remove the cables from the cable clips. After completing the adjustment, put the cables back into the cable clips.

USER GUIDELINES


Vertical pole height adjustment

Use rocker arm ⑨ to adjust the height of the vertical pole (turn clockwise to raise the vertical pole; turn counterclockwise to lower the vertical pole).

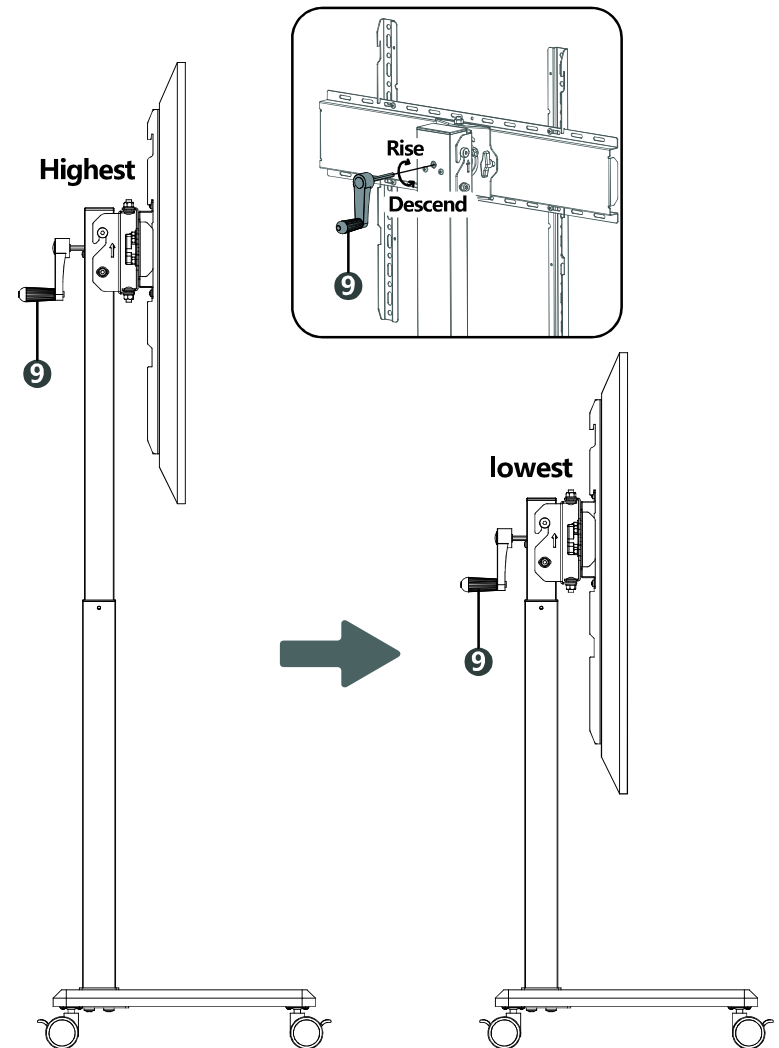

Winding Handle Storage


Attach one clip **G** to the top of the upper pole (flush with the top plastic part), and attach the other clip **G** **3cm** below the first one, aligned with it.

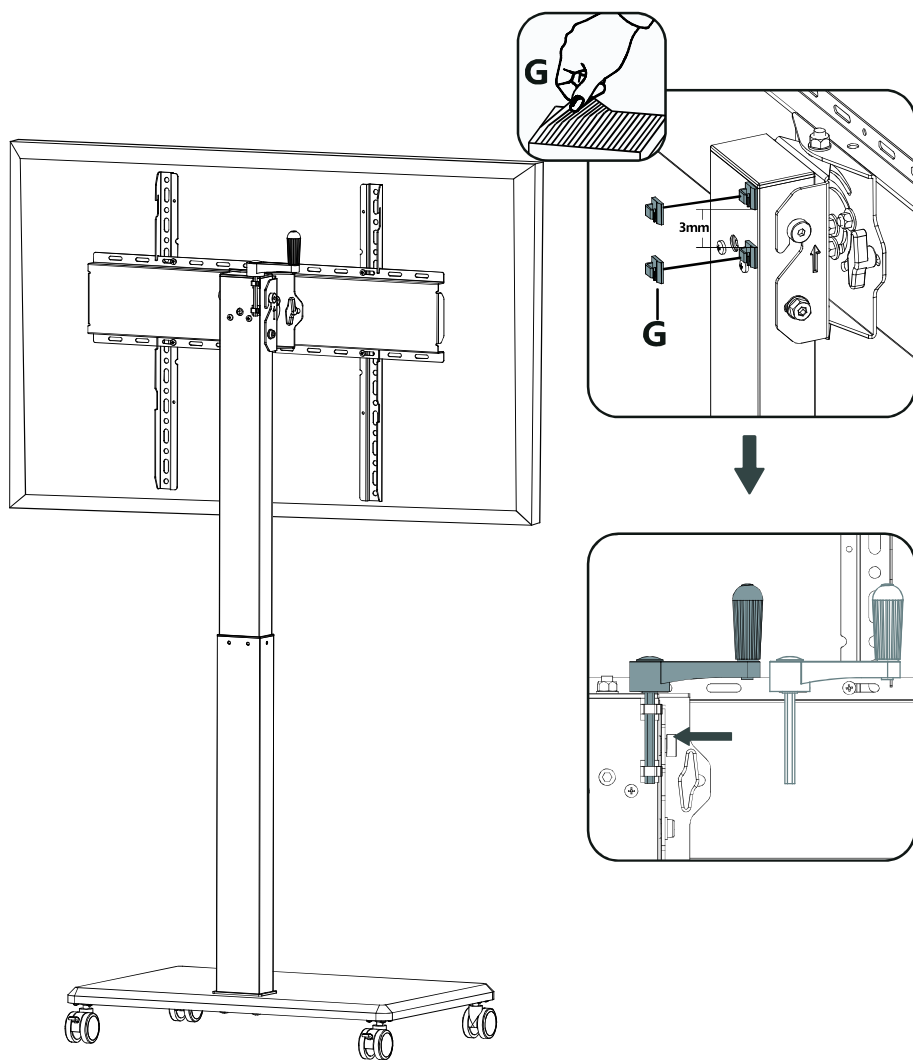

Viewing Angle Adjustment

TV plate **6** can swivel left and right **20** degrees to provide you a wide-range of viewing angles when watching the TV.


Note - Swivel function is manual, not automatic.
Base is not turntable.

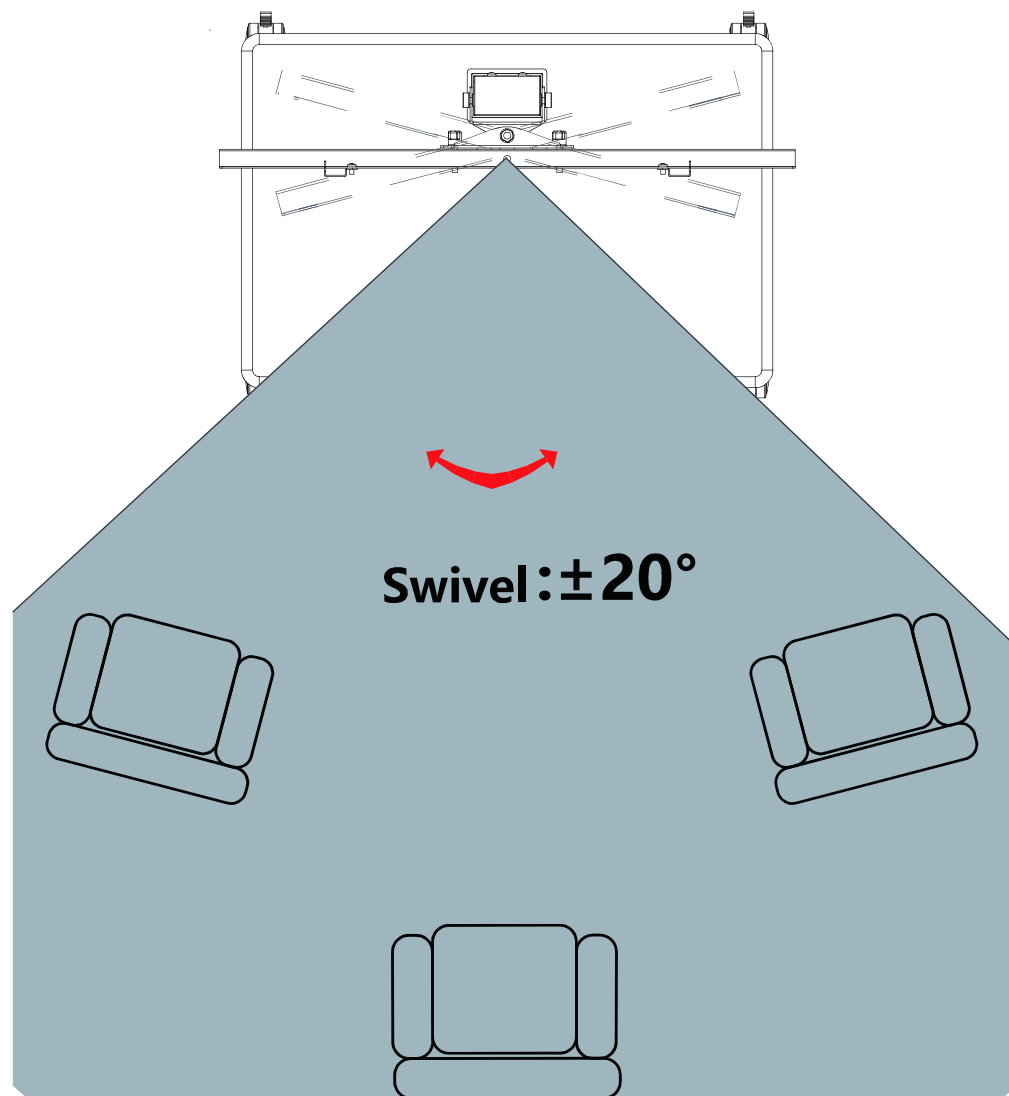

Landscape – Portrait Adjustment

The TV plate ⑥ can rotate **90** degrees to the left and right respectively, providing you with a better viewing angle.

Note- Tilt function is manual, not automatic.

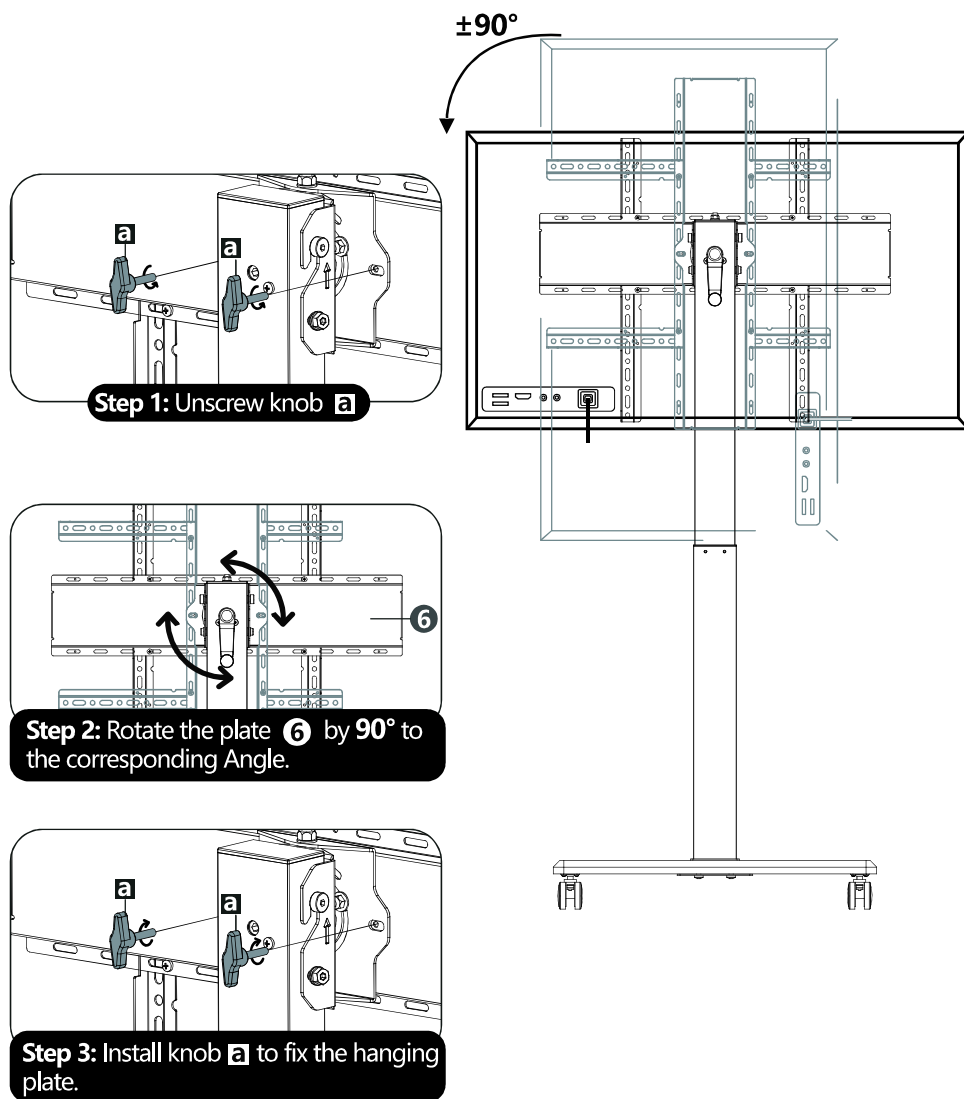

MOVE EASILY

The stand can be moved easily when required. Before moving the stand, make sure all wheels are unlocked and keep your hands in a comfortable position on the stand, as shown below, to maintain control and prevent it from tipping over.

For longer distances, we recommend removing the TV and any other equipment from the stand before moving it.

Take extra care when moving the stand over carpet, uneven surfaces, thresholds or other obstacles.

