

Assembly Instructions for Plasma/LCD TV Stand




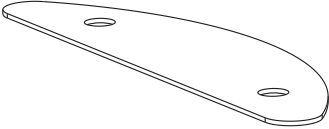




Thank you for choosing our Plasma/LCD TV Stand, it allows you to swivel your new television left and right 30°.









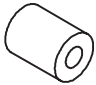
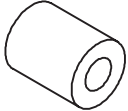
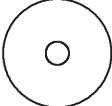

Safety Warning: If you do not understand these directions, or have any doubts about the safety of the installation, please call a qualified contractor. Check carefully to make sure there are no missing or defective parts. Never use defective parts. Improper installation may cause damage or serious injury. Do not use this product for any purpose that is not explicitly specified in this manual. We can not be liable for damage or injury caused by incorrect mounting, incorrect assembly, or incorrect use.

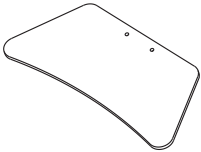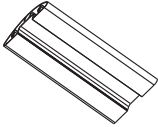Note: We makes every effort to assure all necessary television mounting hardware is included. If the hardware you need is not included please consult your local hardware store.

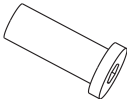
Required Tools: Phillips screw driver.

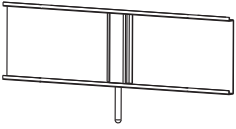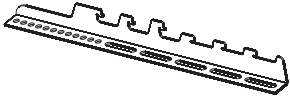Supplied Parts


No.	Picture	Description	Quantity
1		Tempered Glass Base	1
2		Aluminum Profile With Cable Cover Slot	1
3		Connect Metal Pipe	2
4		Metal Cover	1
5		Plastic Cable Cover	2
6		Top Plastic Support Cover	1
7		Metal Pipe Screw	2
8		Aluminum Feet	2

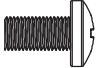No.	Picture	Description	Quantity
20		Plate	1
21		Monitor Bracket	2
22		M5x12 Bolt	4
23		M5x30 Bolt	4
24		M6x12 Bolt	4
25		M6x35 Bolt	4
26		M8x16 Bolt	4
27		M8x40 Bolt	4
28		M4/M5 Spacer	4
29		M6/M8 Spacer	4
30		M4/M5 Washer	8
31		M6/M8 Washer	4


Step 1

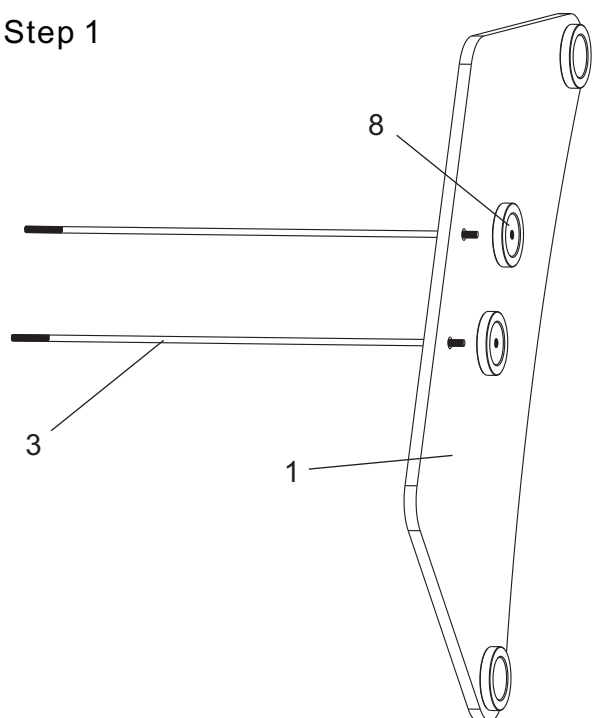


Step 2

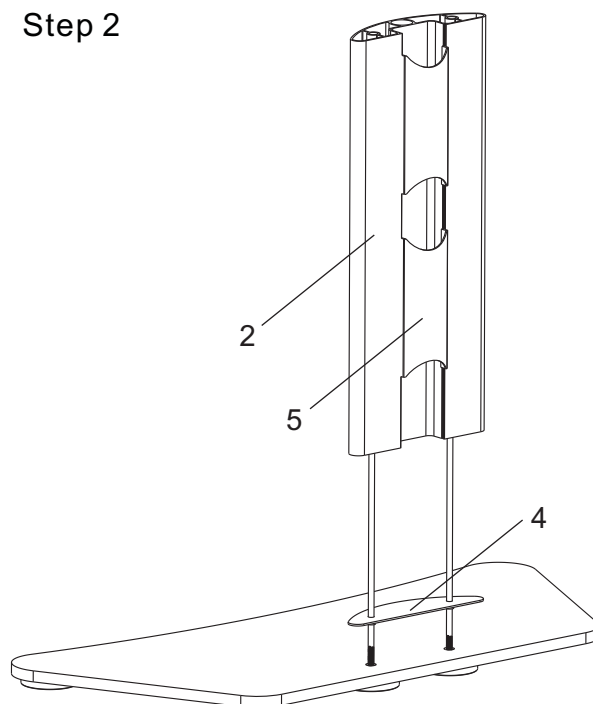

Step 3

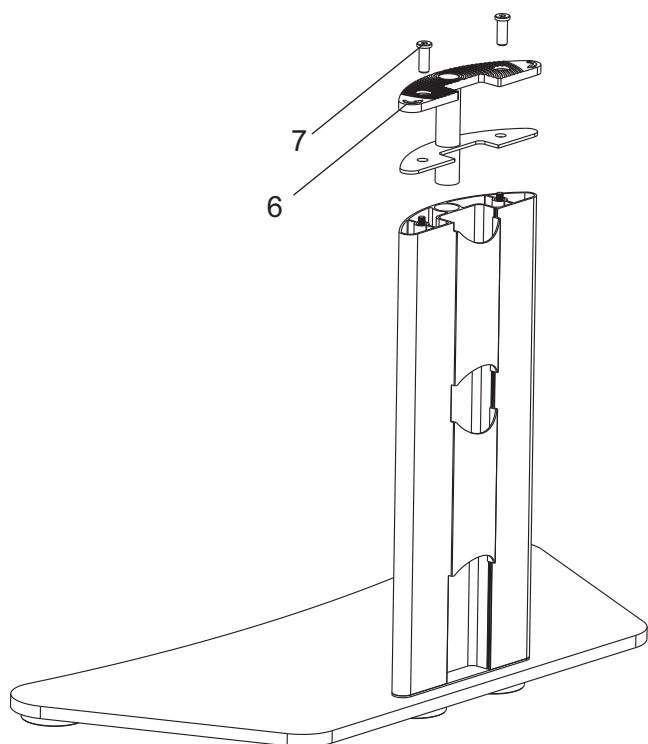


Step 4

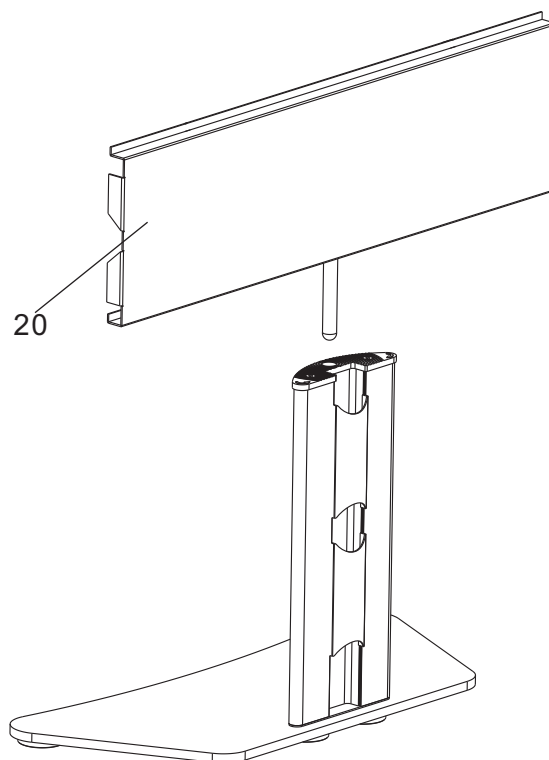


Step 5: Mounting Monitor Brackets to a television with a Flat Back

First, determine the diameter of the Bolt(22,24,26) your TV requires by hand threading them into the threaded insert on the back of the TV. If you encounter and resistance, pls stop immediately! Once you have determined the correct diameter, see the appropriate diagram below. You will thread the Bolt through the appropriate Washer(30,31), the Monitor Bracket(21), and finally into the TV. Make sure the Monitor Brackets are vertically centered and level with each other.

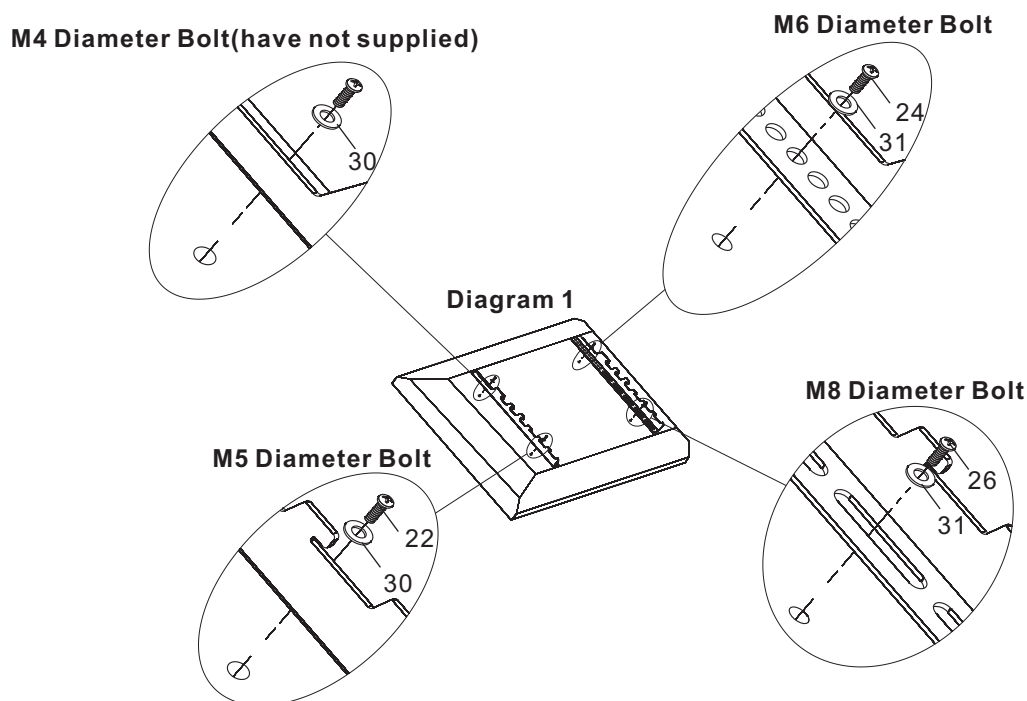

Step 6: Mounting Monitor Brackets to a television with a curved back, recessed threaded inserts or any other obstruction.

First, determine the diameter of the Bolt(23,25,27) your TV requires by hand threading them into the threaded insert on the back of the TV. If you encounter and resistance, pls stop immediately! Once you have determined the correct diameter, see the appropriate diagram below. You will thread the Bolt through the Washer(30,31), the Monitor Bracket(21), a spacer(28,29) and finally into the TV. For the M4 or M5 diameter bolt, you will need another M4/M5 Washer between the Monitor Bracket and the Spacer. Make sure the Monitor Brackets are vertically centered and level with each other.

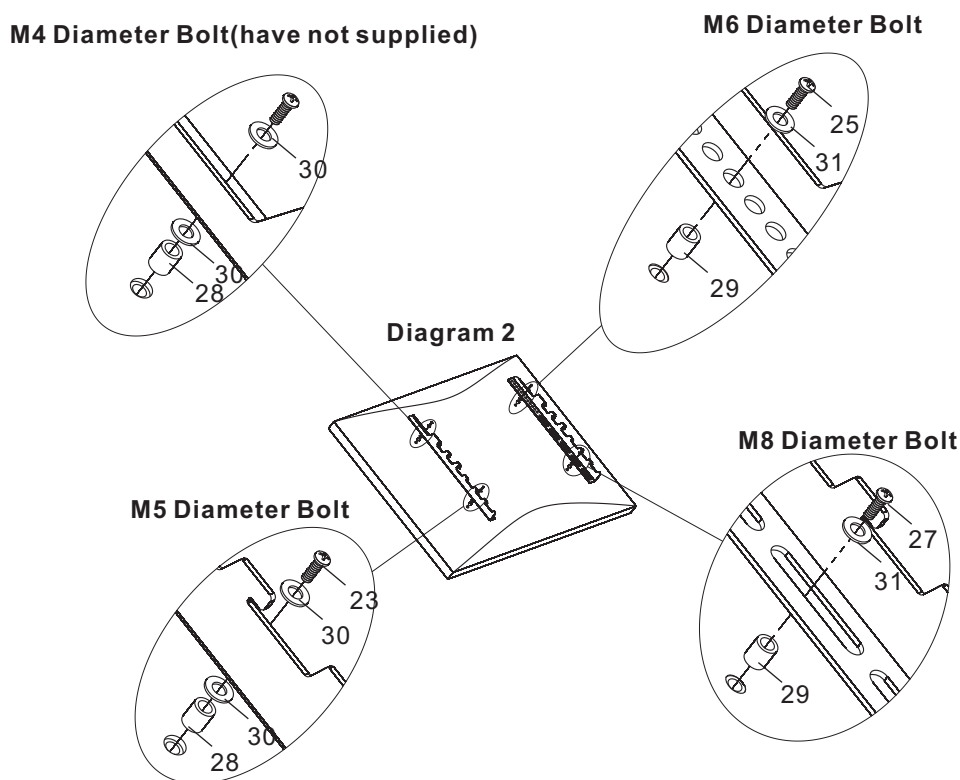

Step 7: Mounting the flat panel television to the plate.

Warning: Some televisions may require 2 people to lift! We are not responsible for personal injury or product damage.

First choose the right vertical height you want(there are three hooks on the Monitor Bracket, it was used to change the height of TVs), then hook the Monitor Brackets(21) over the top of the Plate(20) as shown in the below diagram.

