


**LONG REACH ARTICULATING
TV WALL MOUNT**

VESA:800X600mm (Max)
200X100mm (Min)

Model : SCLART12XL

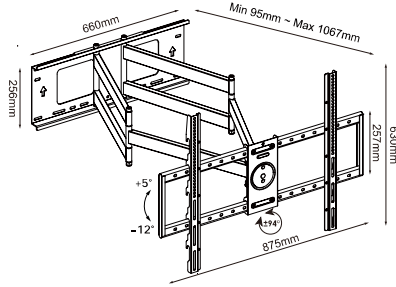



Does your TV (including accessories) weigh more than 176 lbs. (80 kg)? No — Perfect! Yes— This mount is NOT compatible.

**176 lbs
(80kg)**

⚠WARNING: Exceeding the weight capacity can result in serious personal injury or damage to equipment! It is the installers's responsibility to make sure the weight of the TV (with accessories) does not exceed 176 lbs(80kg).

Verify Your Wall Construction

⚠CAUTION
DO NOT install into drywall alone

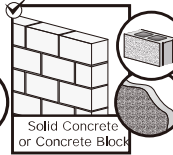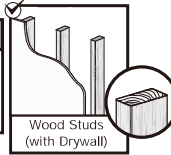

If you are not sure the wall construction, please contact our customer service at: sales@suremount.co.nz

Please read through these instructions completely to be sure you're comfortable with this install process. Also check your TV owner's manual to see if there are any special requirements for mounting your TV.

If you do not understand these instructions or have doubts about the safety of the installation, assembly or use of this product, please contact us via: sales@suremount.co.nz

CAUTION: Avoid potential personal injuries and property damage!



This product is designed for use in wood stud/concrete walls DO NOT install into drywall.

The wall must be capable of supporting five times the weight of the TV and mount combined.

Do not use this product for any purpose not explicitly specified by manufacturer.


Manufacturer is not responsible for damage or injury caused by incorrect assembly or use.

Tools Needed

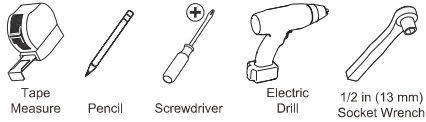

Hardware Included

⚠WARNING: This product contains small items that could be a choking hazard if swallowed. Before starting assembly, verify all parts are included and undamaged. If any parts are missing or damaged, do not return the damaged item to your dealer; contact Customer Service. Never use damaged parts! NOTE: Not all parts and hardware included will be used.



01 x1

wallplate template



04 x1



02 x1

Level



05 x1




03 x1


Velcro Tie



06 x5




M8 X 70 mm
A x6



⚠WARNING: Installation must use the screws and accessories provided by our company, otherwise we are not responsible for any problems.



B x6



M6X15mm
D x4



M6X35mm
E x4



M8X15mm
F x4



M8X25mm
G x4



M8X35mm
H x4



M8X50mm
I x4

TV Screws



Ø8
J x4



L 2.5MM
K x8




L 5MM
L x8




L 22MM
M x4

TV Washers




Wrench



M6X25mm
O x4



4mm
P x1



Allen key



4mm
P x1

Step 1–1 Select TV Screw Diameter


Hand thread screws into the threaded inserts on the back of your TV to determine which screw diameter (M4, M6, or M8) to use.



Step 1–2 Select TV Screw Length


If your TV has a flat back, AND you want your TV closer to the wall, use the shorter screws(A). Use the spacers and longer screws(B) to accommodate:

- Round/irregular back TVs
- TVs with inset mounting holes
- Extra space needed for cables

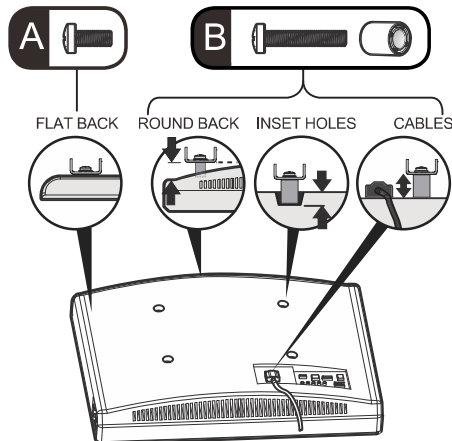


Standard configurations are shown. For special applications, or if you are uncertain about your hardware selection, you can contact us at: sales@suremount.co.nz


⚠CAUTION: Verify adequate thread engagement with the screw/washer/spacer combination and TV bracket. -Too short will not hold the TV. -Too long will damage the TV.

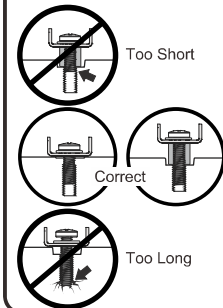

Specification Sheet

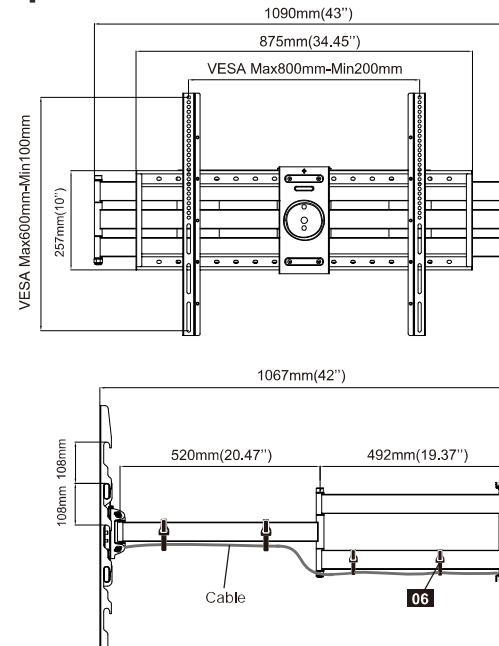

www.suremount.co.nz

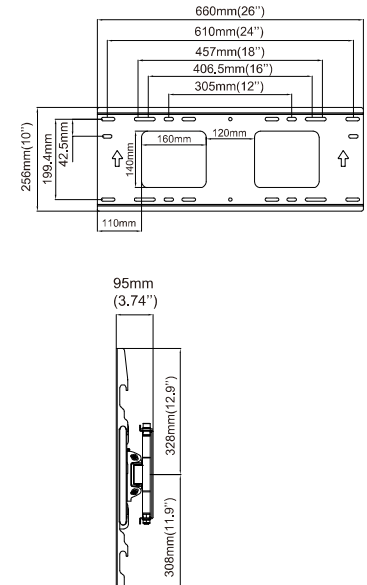


Step 2A Wall Plate Instal (Wood Stud)

⚠ CAUTION: Avoid potential personal injury or property damage! All Lag Bolts **A** MUST BE firmly tightened to prevent unwanted movement of the Wall Plate **01**.

- Drywall covering the wall must not exceed 5/8 in. (16mm)
- Minimum wood stud size: common 2x4 in. (51x102mm) nominal 1x3½ in. (38x80mm)


⚠ CAUTION: Ensure the Wall Plate **01** is securely fastened to the wall before continuing on to the next step.

2A-1

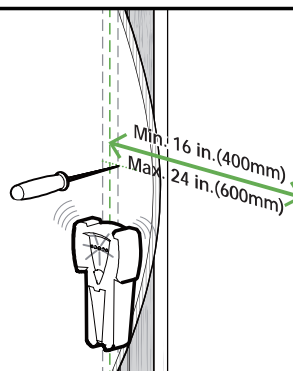


Locate your studs. Verify and mark the center of the studs by finding the stud edges using an awl, a thin nail, or an edge-to-edge stud finder.

2A-2

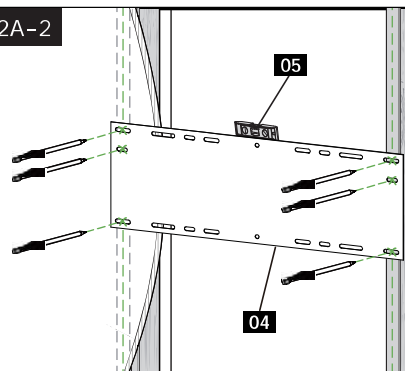


Position the Arm assembly / Wall Plate **04** at your desired height and line up the holes with your stud center line. Level the wall plate and mark the holes.

2A-3

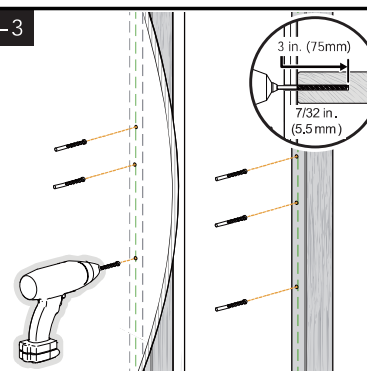


Drill pilot holes using a 7/32 in. (5.5mm) diameter drill bit.
⚠ IMPORTANT: Pilot holes must be drilled to a depth of 3 in. (75mm). Be sure to drill into the center of the stud.

2A-4

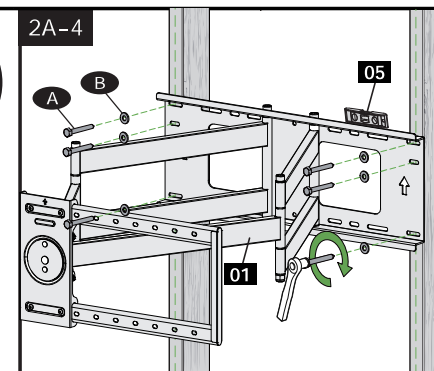

Install wall plate **01** using lag screws **A** and washers **B**. Tighten the lag screws only until they are pulled firmly against the wall plate **01**. And reattach the decorative caps to the wall plate.


Step 2B Wall Plate Instal (Solid Concrete or Concrete Block)

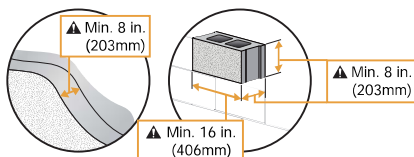

⚠ CAUTION: Avoid potential personal injuries and property damage!


- Minimum solid concrete thickness: 8 in. (203mm)
- Minimum concrete block size: 8 x 8 x 16 in. (203x203x406mm)
- Mount wall plate **01** directly onto the concrete surface.

2B-1

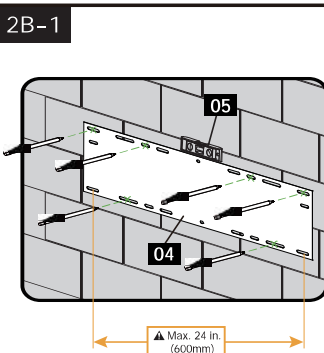


Position wall plate Template **04** at your desired height. Level then mark the six hole locations.

2B-2

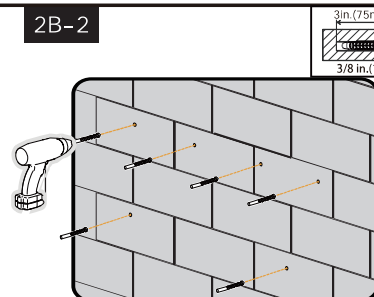


Drill six pilot holes using a 3/8 in. (10 mm) masonry drill bit.
⚠ IMPORTANT: Pilot holes must be drilled to a depth of 3 in (75 mm). Never drill into the mortar between blocks.

2B-3

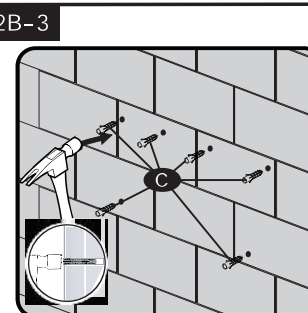

Insert six wall anchors **C** (10x60mm) to the wall
⚠ CAUTION: Be sure the anchors are seated flush with the concrete surface.


2B-4

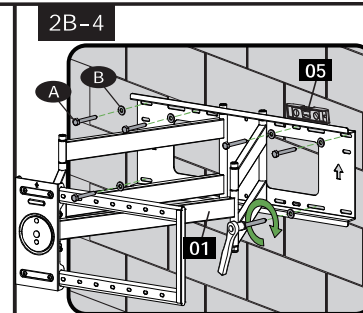


Install wall plate **01** with six washers **B** and lag screws **A**
⚠ CAUTION: Improper use could reduce the holding power of lag screws **A**. DO NOT over-tighten the screws.

Step 3 Attach TV Brackets to TV back

(a) Flat Back

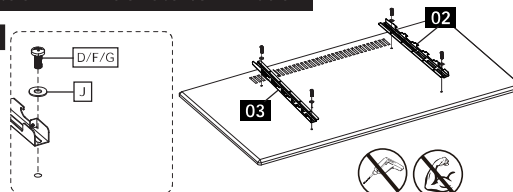


(b) Round Back / Extra Space

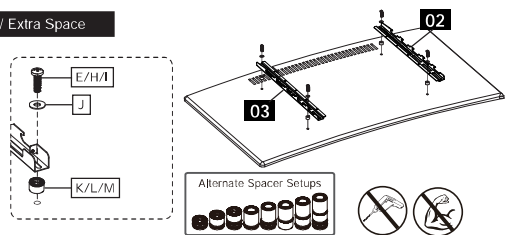


Step 4 Hang the TV onto the Arm Assembly/Wall Plate

4-1

⚠ HEAVY! You may need assistance with this step.

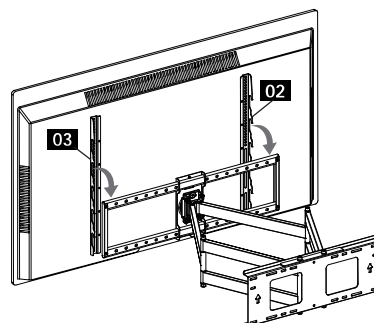

4-2

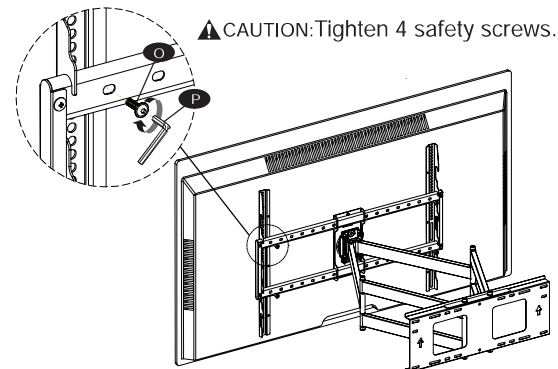

Step 5 Tilt adjustment

Loosen the nut with a wrench **N** to adjust the appropriate tilt Angle and tighten the nut.

